

# YARWAY UNIVERSAL CONNECTOR STEAM TRAP RENEWAL KITS

INSTRUCTION, OPERATION AND MAINTENANCE MANUAL

Before installation, these instructions must be carefully read and understood.

721-UC Disc Trap



UF800 Float Universal Connector renewal kit



### GENERAL

Yarway's Universal Connector Renewal Kits upgrade an existing Universal Connector body and are available in multiple steam trap technology types to fit all applications.

Retrofitting a Universal Connector body to the Yarway 700 Series Unibody line offers additional benefits for future renewals. Rather than replacing the entire trap next time, only the capsule needs changed, saving time and expense.

Please refer to document VCIOM-09541 for further information on installing, operating, and maintaining the Yarway 700 Series Unibody.

Technology		Product Family	Universal Connector  Position	Dimension A, inches (mm)	Description	Part Number
Thermodynamic	Disc	721-UC-A 711-UC-A	Side-mounted	3.94 (100)	SC	YG112727-12
					HC	YG112727-13
					HP	YG112727-14
					XHC	YG112727-15
		721-UC 711-UC	Top-mounted	2.75 (70)	SC	YG112727-07
					HC	YG112727-09A
					HP	YG112727-08
					XHC	YG112727-10
	Piston	741-UC 731-UC	Any Position	5.2 (132)	AH internals	YG112728-11
					AL internals	YG112728-10
					BH internals	YG112728-13
					BL internals	YG112728-12
					CL internals	YG112728-14
					CH internals	YG112728-15
					EH internals	YG112728-17
					EL internals	YG112728-16
Thermostatic	FTE	761-UC 751-UC	Any Position	3.1 (78)	05 Internals	YG112729-05
					40 Internals	YG112729-06
					HP Internals	YG112729-07
	Bimetallic	UB300	Any Position	4.5 (114)	Standard	UB300-UB
Mechanical	Float	UF800	Side-mounted	7.5 (190)	65 psi max ΔP	UF800-65
					145 psi max ∆P	UF800-145
					203 psi max ΔP	UF800-203
					305 psi max ΔP	UF800-305
					464 psi max ΔP	UF800-464

# YARWAY UNIVERSAL CONNECTOR STEAM TRAP RENEWAL KITS

INSTRUCTION, OPERATION AND MAINTENANCE MANUAL

#### WARNING


Hot discharge from this product may cause severe burns. Discharge must be piped away or directed so that persons in the vicinity are not endangered. This product must be isolated, vented and cool to the touch before repairing or inspecting.

#### **INSTALLATION**

Follow these steps to ensure proper trap operation:

- 1. Make certain all isolation and stop valves are closed.
- 2. SLOWLY open the strainer blow down and test tee valves to relieve pressure.
- 3. Do not disassemble a hot trap. Allow time for it to cool, or pour cool water on it prior to any work.
- 4. Clean all gasket seating surfaces. Take care not to scratch gasket surfaces.
- 5. Verify that both the inner and outer gaskets are in place on the Universal Connector renewal kit.
- 6. Assemble the Yarway Universal Connector renewal kit to the 'All Position' connector. Take care to align the body's flow arrow correctly. Torque the two bolts to 35 to 50 ft-lbs [47.5 to 67.8 N•m] making sure to tighten the bolts evenly.

FIGURE 1 Dimensions

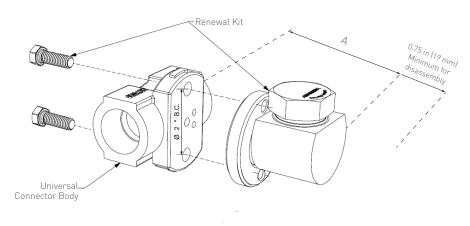

# YARWAY UNIVERSAL CONNECTOR STEAM TRAP RENEWAL KITS

#### INSTRUCTION, OPERATION AND MAINTENANCE MANUAL

#### NOTE

Any malfunction of this product must be reported to the service department.

Repair made to the product by unauthorized personnel will void the warranty.

# Right to know laws and OSHA standard 29CFR (1910.1200)

Material Safety Datasheets on the following Yarway products: Valves, Steam traps and Strainers

The OSHA Hazard Communication Standard 29CFR 1910.1200, states that the standard does not apply to 'articles'. The standard defines an article as:

'A manufactured item formed to a specific shape or design for a particular use which does not release or otherwise expose an employee to a hazardous chemical under normal conditions of use'.

The above named products fall within the definition of an 'article', no Material Safety Datasheets are available or are required. Our product is manufactured as an 'end product'. If the product is a weld end, the following applies.

#### WARNING

Materials used in manufacture of Yarway products are considered in a stable condition when shipped.

However, under certain conditions purchasers could create potential hazardous conditions by their future operations.

#### **CAUTION**

Welding, cutting, burning, machining or grinding of this product can generate toxic dust and fumes of potentially hazardous ingredients. The dust or fumes can cause irritation of the respiratory tract, nose, throat, skin and eyes. It may cause temporary or permanent respiratory disease in a small percentage of exposed individuals. Use moderate ventilation when grinding or welding. Avoid breathing dust, fumes or mist. Avoid prolonged skin contact with dust or mist. Maintain dust levels below OSHA and ACGIH levels. Use protective devices. Wash hands thoroughly after contact with dust before eating or smoking.

VCIOM-09543-EN © 2018, 2023 Emerson Electric Co. All rights reserved 10/23. Yarway is a mark owned by one of the companies in the Emerson Automation Solutions business unit of Emerson Electric Co. The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their prospective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

Emerson Electric Co. does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson Electric Co. product remains solely with the purchaser.

Emerson.com