FieldQRack and Pinion Pneumatic Actuators





This page intentionally left blank

Table of Contents

Section 1:	Safety Instructions	
1.1	ANSI 534.6 Safety Messages	. 1
Section 2:	General Information	
2.1	General Application	.2
2.2	Inspection and Maintenance Schedules	. 2
2.3	Parts Ordering	.3
Section 3:	FieldQ Actuators	
3.1	Installation	.4
3.2	Operation	.5
	3.2.1 Operating Media	.5
	3.2.2 Operating Temperature Range	.6
3.3	Maintenance	.6
Section 4:	Actuator Accessories	
Actı	uator Accessories	.9
Section 5:	Instructions For Use in (Potential) Explosive Areas	
5.1	Intended Use	1 (
5.2	Safety Instructions	
5.3	Maximum Temperatures	
٠.5	waxiiiuiii ieiiiperatures	12
Appendix:	EU Declaration of Conformity	
FILE	Declaration of Conformity	1 3

This page intentionally left blank

Section 1: Safety Instructions

Please read these safety warnings, cautions, and instructions carefully before using the product.

These instructions cannot cover every installation and situation. Do not install, operate, or maintain this product without being fully trained and qualified in valve, actuator, and accessory installation, operation and maintenance.

To avoid personnel injury or property damage, it is important to carefully read, understand, and follow all of the contents of the associated instruction manual, including all safety cautions and warnings. If you have any questions concerning installation, or use of this product, contact your Emerson sales office before proceeding.

1.1 ANSI 534.6 Safety Messages

WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

A CAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTE:

Indicates information considered important, but not hazard-related.

Safety Instructions 1

Section 2: General Information

NOTE:

The content of this safety guide is only applicable to the base actuator. All safety instructions for the control modules are included in the installation guides as shipped with each control module.

2.1 General Application

The FieldQ Rack and Pinion actuators are intended for the automation and operation of quarter-turn valves like Butterfly, Ball and Plug valves.

Rack and Pinion actuators can also be used to operate venting louvers or any other quarter-turn applications.

This product was intended for a specific range of service conditions: pressure, ambient temperature, operating media, and possibly other specifications. Do not expose the product to service conditions or variables other than those for which the product was intended.

If you are not sure what these conditions or variables are, contact your Emerson sales office for assistance. Provide the product type, size, serial number and all other pertinent information that you have available.

2.2 Inspection and Maintenance Schedules

The FieldQ Rack and Pinion actuators must be inspected periodically and maintained as needed. Refer to the maintenance section of manual DOC.IOM.Q.EN for more detailed information.

The schedule for inspection can only be determined based on the severity of your service conditions. Your installation might also be subject to inspection schedules set by applicable governmental codes and regulations, industry standards, company standards, or plant standards.

In order to avoid increasing dust explosion risk, periodically clean dust deposits from all equipment.

When equipment is installed in a hazardous area location (potentially explosive atmosphere), prevent sparks by proper tool selection and avoiding other types of impact energy.

Proper care must be taken to avoid generation of static electricity on the non-conductive external surfaces of the equipment (e.g. rubbing of surfaces, etc.). The actuator's surface temperature is dependent upon process operating conditions.

2 General Information

2.3 Parts Ordering

Whenever ordering parts for older products, always specify the type, size and serial number of the product and provide all other pertinent information that you can, such as part material, age of the product, and general service conditions. If you have reconfigured the product since it was originally purchased, include that information with your request.

A WARNING

Use only genuine replacement parts. Components that are not supplied by Emerson should not, under any circumstances, be used in any FieldQ product. Use of components not supplied by Emerson may void your warranty, might adversely affect the performance of the product, and could cause personal injury and property damage.

General Information 3

Section 3: FieldQ Actuators

These safety instructions are limited to FieldQ actuators which are operating using air or inert gas. If the application requires use of a flammable or hazardous gas, you must contact your Emerson sales office for assistance.

3.1 Installation

A WARNING

To avoid personal injury and property damage caused by bursting of parts and to avoid parts damage, malfunction of control valve, or loss of control of the process caused by excessive pressure, do not exceed the maximum pressures or temperatures for this actuator, as given in the applicable product literature or on the nameplate. Use pressure-limiting or pressure-relieving devices to prevent the actuator pressure from exceeding specified limits. If you cannot determine the limits for this product, contact your Emerson sales office before proceeding.

- To avoid personal injury, always wear protective gloves, clothing and eyewear when performing any installation operation.
- If hoisting the actuator, use a nylon sling to protect the surfaces.
 Carefully position the sling to prevent damage to the actuator tubing and any accessories. Also, take care to prevent people from being injured in case the hoist or rigging slips. Be sure to use adequately sized hoists and chains or slings to handle the assembly. If an actuator valve assembly should be lifted, it is strongly recommended to connect the nylon lifting slings in such way that the actuator and valve is supported.
- Check with your process or safety engineer for any additional measures that must be taken to protect against process media.
- If installing into an existing application, also refer to the WARNING in the Maintenance section.
- Do not connect a pressure vessel, to the actuator, with unrestricted media
- Do not exceed the MAXIMUM stated operating pressures.
- Applying pressure directly to the actuator can turn the actuator's shaft/Valve stem.
- Applying a control signal to the actuator's solenoid can turn the Actuator/Valve assembly.

A WARNING

Stay away from moving parts to prevent serious injury. When test cycling the actuator and valve assembly by applying pressure to the A or B port, be aware that there are moving parts like pinion top, actuator to valve coupling and the valve blade, ball, plug, etc. Isolate the piping system on which an actuator-valve assembly is installed, when removing this assembly, and relieve any media pressure that may be trapped in the valve cavities before removing the actuator for maintenance.

3.2 Operation

WARNING

When rotating the actuator stem or shaft with loading pressure applied, use caution to keep hands and tools out of the actuator travel path. Personal injury and property damage is possible if something is caught between the actuator stem and other control valve assembly parts.

3.2.1 Operating Media

- 1. Use clean, dry or lubricated air or inert gas.
- 2. Maximum Operating Pressure (MOP) = 8.3 barg/120 psig MOP is the pressure required to produce the maximum rated torque at the break position for all actuators. Pressure should not exceed MOP during valve rotation. MOP should be the maximum pressure regulator setting.

A WARNING

It can be assured that the housing will not rupture or burst when applying 10 bar of pressure but the cycle function cannot be guaranteed as it totally depends on the time span to which actuator is subjected at 10 bar and the frequency at which these pressure peaks occurs. Every time this peak occurs will, for sure, have a significantly negative effect on the life expectancy of the actuator.

3. Refer to below table on applications where the spring stroke of spring-return actuators is pneumatically operated.

Table 1. Maximum pressure on spring stroke of spring-return actuators

Spring set	Maximum pressure on spring stroke of spring-return actuators		
N=10	7 barg / 101.5 psig		
N=20	6 barg / 87.0 psig		
N=30	5 barg / 72.5 psig		
N=40	4 barg / 58.0 psig		
N=50	3 barg / 43.5 psig		
N=60	2 barg / 29.0 psig		

- 4. Dew point at least 10K below ambient temperature.
- 5. For subzero applications take appropriate measures.
- Mentioned pressure levels are "gauge pressures".
 Gauge pressure is equal to absolute pressure minus atmospheric pressure.

3.2.2 Operating Temperature Range

- 1. Using standard seals and greases the operating temperature range is -20 °C to +80 °C (-4 °F to +176 °F) as is indicated on the product label.
- Other medias and temperatures may be used but consult your local Emerson sales office for confirmation as to suitability.

3.3 Maintenance

Before mounting or (dis)assembling the actuator consult the relevant sections of the installation, operation and maintenance manual for more detailed maintenance information.

A WARNING

Avoid personnel injury or property damage from sudden release of process pressure or uncontrolled movement of parts. Before performing any maintenance operations:

- Always wear protective gloves, clothing, and eyewear.
- Disconnect any operating lines providing air pressure, electric power, or a control signal to the actuator. Be sure the actuator cannot suddenly open or close the valve.
- Do not remove the actuator from the valve while the valve is still pressurized.
- Vent any pneumatic pressure from the actuator and relieve any actuator spring pre-compression.
- Use lock out procedures to be sure that the above measures stay in effect while you work on the equipment.
- Never apply pressure to a partially assembled actuator unless all pressure-retaining parts have been installed properly.
- Check with your process or safety engineer for any additional measures that must be taken to protect against process media.
- Do not remove the Pistons from the Actuator Body by using air pressure when the End Caps have been removed.

A CAUTION

Do not turn out the travel stops completely when the actuator is pressurized. When adjusting the travel stops and the actuator is still pressurized, the travel stops can "shot" away when completely turned out.

A CAUTION

- Spring-return actuators contain springs in a compressed state. Follow these instructions to release the spring force safely. The end caps of spring-return actuators sizes 25 to 600 should be free of the spring load after 10 full turns (crosswise relaxing) of the end cap screws. If there is still spring load on the end cap, this might indicate a broken spring cartridge. Stop this disassembly procedure immediately. Continuing might cause the end cap to be "shot" away causing serious injury. Spring-return actuator size 950 to 1600 have long end cap screws to release the spring load safely. Refer to Appendix A of manual DOC.IOM.Q.EN for the instructions on how to safely remove the spring load before disassembling the end cap from the spring-return actuator.
- A spring-return actuator mounted on a valve, which is stuck in mid stroke, contains a high spring load which will cause a sudden rotation during disassembly of the actuator versus the valve or valve bracket. This can cause serious injury to personnel or equipment damage.
 Refer to Appendix A of manual DOC.IOM.Q.EN for instructions to safely remove the spring load before disassembling the actuator from a valve, which is stuck in mid stroke.

8 FIeldO Actuators

Section 4: Actuator Accessories

The actuator may be equipped with components for control and/ or feedback. Check the instructions of these components for installation, operation and maintenance instructions.

Actuator Accessories 9

Section 5: Instructions for Use in (Potential) Explosive Areas

5.1 Intended Use

The FieldQ pneumatic actuators are intended for use in areas in which explosive atmospheres caused by mixtures of air and gases, vapours, mists or by air/dusts are likely to occur. Therefore it may be used in classified Zones 1, 2 with equipment protection level Gb (Gasses) and/or Zones 21, 22 with equipment protection level Db (Dust).

5.2 Safety Instructions

- Assembly, disassembly and maintenance, is only allowed at the actuator, when, at the time of the activity, there are no explosive mixtures.
- Prevent entry of explosive mixtures into the actuator.
 We suggest utilizing a solenoid with a "breather" function on spring-return actuators when used in potentially explosive atmospheres.
- 3. The plastic position indicator can cause an ignition due to electrostatic discharge. Therefore the plastic position indicators are only approved for use in certain potentially explosive (Ex) gas group areas, without additional warning on the equipment of Electro static hazard.

 Each indicator is shipped with an "Electrostatic Hazard Warning Sticker" which must be applied to the equipment according below schedule.

Table 2.

Actuator	Ex Gas Group				
Sizes	IIA	IIB	IIC		
Small indicator (actuator sizes up to size 350)	OK to use without warning sticker	OK to use without warning sticker	Apply the Electrostatic Hazard Warning sticker		
Larger indicator (actuator sizes 600 up to 4000)	Apply the Electrostatic Hazard Warning sticker	Apply the Electrostatic Hazard Warning sticker	Apply the Electrostatic Hazard Warning sticker		

- 4. In order to avoid increasing dust explosion risk, periodically clean dust deposits from all equipment.
- When equipment is installed in a hazardous area location (potentially explosive atmosphere), prevent sparks by proper tool selection and avoiding other types of impact energy.
- 6. Rack and pinion actuators do not have an inherent ignition source due to electro-static discharge, but explosion hazards may be present due to the discharge of static electricity from other valve assembly components.
 - To avoid personal injury or property damage, make sure that the valve is grounded to the pipeline before placing the valve assembly into service.
 - Use and maintain alternate shaft-to-valve body bonding, such as a shaft-to-body bonding strap assembly.
- 7. Proper care must be taken to avoid generation of static electricity on the non-conductive external surfaces of the equipment (e.g. rubbing of surfaces, etc.).
- The paint protection must not exceed 200 μm if the actuator is used in a group IIC atmosphere. For group IIA or IIB atmospheres the paint protection must not exceed a thickness of 2 mm (0.08").

5.3 Maximum Temperatures

WARNING

The actuator's surface temperature is dependent upon process operating conditions. Personal injury or property damage, caused by fire or explosion, can result if the actuator's surface temperature exceeds the acceptable temperature for the hazardous area classification. To avoid an increase of instrumentation and/or accessory surface temperature due to process operating conditions, ensure adequate ventilation, shielding, or insulation of these actuator components installed in a potentially hazardous or explosive atmosphere.

Table 3. Temperature range for (potential) explosive areas

Tem	Valid for			
Ambient range	Temperature class	TX (surface temperature)	actuator model	
-20 °C (-4 °F) - 75 °C (167 °F)	T6	T85 °C (185 °F)	S = Standard Temperature	
-20 °C (-4 °F) - 80 °C (176 °F)	T5	T90 °C (194 °F)		
-10 °C (14 °F) - 90 °C (194 °F)	T5	T100 °C (212 °F)	H = High Temperature	
-10 °C (14 °F) - 120 °C (250 °F)	T4	T130 °C (266 °F)		
-40 °C (-40 °F) - 75 °C (167 °F)	T6	T85 °C (185 °F)	L = Low Temperature	
-40 °C (-40 °F) - 80 °C (176 °F)	T5	T90 °C (194 °F)		

The specified values are valid with the following conditions: Maximum cycle frequency of the actuator is 1 Hz at a maximum of 50 cycles per hour and at maximum load.

Appendix A: **EU Declaration of Conformity**

QD



ROC nr 8140 Rev. 1

Legal representative entity for the European Union: Emerson Automation Solutions, Actuation Technologies Patrijsweg 140, 2289 EZ Rijswijk, Netherlands

FieldO

We hereby declare, that the products specified below meet the basic health and safety requirements of the above mentioned European Directives.

Product Description:

· FieldQ Pneumatic Actuator

Actuator Type and Sizes:

Identifier Double-Acting types:

 Identifier Spring-Return types: QS Sizes 40, 65, 100, 150, 200, 350, 600, 950 and 1600

Product Variations:

 Product variations of the above mentioned types are still covered by the above directives and are CE marked.

Serial Number:

· Each actuator has an identifiable serial number.

Manufacturer:

· Emerson Process Management Valve Automation (M) Sdn. Bhd. Lot 13112, Mukim Labu, Kawasan Perindustrian Nilai.

71807 Nilai, Negeri Sembilan Malaysia

EU Declaration of Conformity

Issued in accordance with the:

Pressure Equipment Directive (PED) 2014/68/EU

- For Gas Group 2 (see DOC.SG.FQ.1, Section 3.2.1 Operating Media) FieldQ pneumatic Actuators are excluded from the requirements of the Pressure Equipment Directive 2014/68/EU based on article 3.6 of the directive.
- For Gas Group 1 pressure media, first consult engineering to check compatibility of pressure media with the actuator.
- · The below listed limited range of FieldQ actuator sizes are rated "Sound-Engineering-Practice" or Module A (Internal production control) and are available on request for use with Gas Group 1 media.
- Double-Acting types: QD 40, 65, 100, 150, 200, 350, 600 or 950
- Single-Acting types: QS 40, 65, 100, 150, 200, 350, 600 or 950

Declaration of Incorporation of partly completed machinery

Issued in accordance with the

Machinery Directive 2006/42/EC, Appendix IIb

Essential requirements applied and complied with:

- 1.1.2, 1.1.3, 1.1.5, 1.3.2, 1.3.4, 1.3.7, 1.5.3, 1.5.4, 1.5.7, 1.6.1, 1.7.1, 1.7.3 and 1.7.4
- · Technical documentation is drafted in compliance with Appendix VII, section B.
- Before the actuator is put into operation, the machine into or onto which the actuator will be installed, must comply with the stipulations of the machinery directive.
- The relevant information concerning the machine or part will be available in the event of a motivated request from national authorities.

Applicable standards:

• EN ISO 12100:2010

EU Declaration of Conformity

Issued in accordance with the:

ATEX Directive 2014/34/EU ATEX Marking:

- 🖨 II 2G Ex h IIC TX Gb
- · For maximum temperature limits and classifications see Safety Guide: DOC.SG.FQ.1 chapter 5, instructions for use in potentially explosive atmospheres

Applicable standards:

• EN IEC 60079-0:2018 EN ISO 80079-36:2016 EN ISO 80079-37:2016 EN 1127-1:2019

> Signed: Name:

Position:

S. Iones

Director, Rack and Pinion SBU **Emerson Automation Solutions Actuation Technologies**

Date: Place:

2020-06-03 Houston TX, U.S.A.

VCCAQ-15649-EN

Appendix 13 World Area Configuration Centers (WACC) offer sales support, service, inventory and commissioning to our global customers. Choose the WACC or sales office nearest you:

NORTH & SOUTH AMERICA MIDDLE EAST & AFRICA

19200 Northwest Freeway P. O. Box 17033 Houston TX 77065 Jebel Ali Free Zone

ISA Dubai

T+1 281 477 4100 T+971 4 811 8100

 Av. Hollingsworth
 P. O. Box 10305

 325 Iporanga Sorocaba
 Jubail 31961

 SP 18087-105
 Saudi Arabia

 Brazil
 T +966 3 340 8650

T+55 15 3413 8888

ASIA PACIFIC Longmeadow Business Estate East

24 Angus Crescent

P.O. Box 6908 Greenstone
No. 9 Gul Road 1616 Modderfontein Extension 5

FUROPE

#01-02 Singapore 629361 South Africa T +65 6777 8211 T +27 11 451 3700

No. 1 Lai Yuan Road Wuqing Development Area

Tianjin 301700 Holland Fasor 6
P. R. China Székesfehérvár 8000

T+86 22 8212 3300 Hungary T+36 22 53 09 50

Strada Biffi 165

29017 Fiorenzuola d'Arda (PC)

Italy

T+39 0523 944 411

For complete list of sales and manufacturing sites, please visit www.emerson.com/actuationtechnologieslocations or contact us at info.actuationtechnologies@emerson.com

www.emerson.com/fieldq

VCSGD-16019-EN @2021 Emerson. All rights reserved.

The Emerson logo is a trademark and service mark of Emerson Electric Co. FieldO™ is a mark of one of the Emerson family of companies. All other marks are property of their respective owners.

The contents of this publication are presented for information purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the designs or specifications of our products at any time without notice.



