



CUSTOMER SUPPLY CONTROLLER & ACTUATOR ASS'Y
FIELD WIRING TRANS

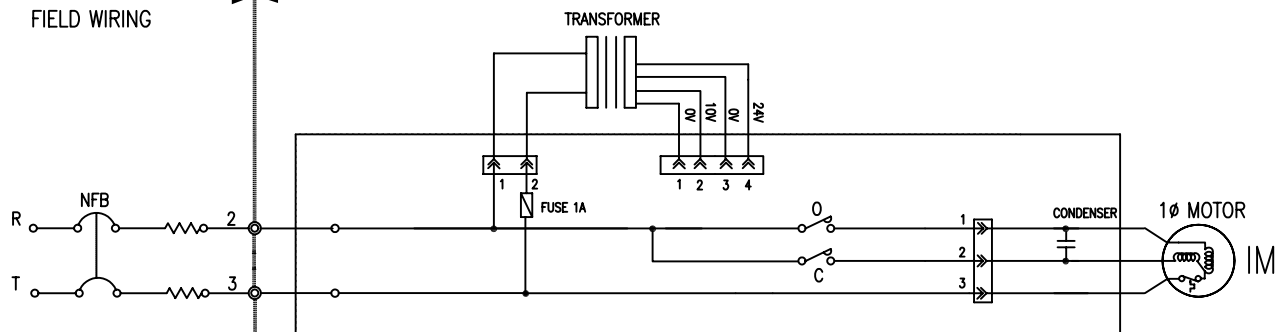

```
** TERMINAL BLOCK **
```

PART	1	13
	2	14
	3	15
	4	16
	5	17
	6	18
	7	19
	8	20
	9	21
	10	22
	11	23
	12	24

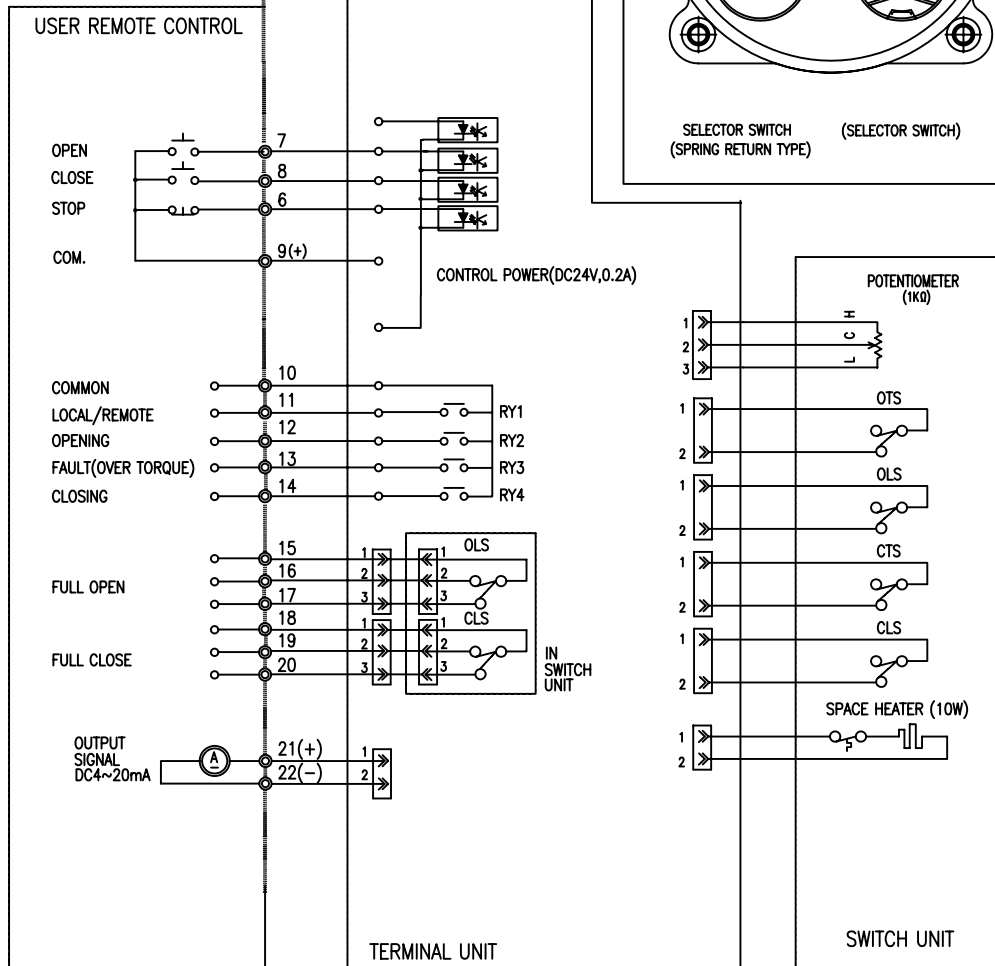

**** NOTE ****

OLS : OPEN LIMIT SWITCH
 CLS : CLOSE LIMIT SWITCH
 OTS : OPEN TORQUE LIMIT SWITCH
 CTS : CLOSE TORQUE LIMIT SWITCH
 O/C : OPEN/CLOSE POWER RELAY(DC 24V)
 RL : RED LAMP FOR OPEN WL : WHITE LAMP FOR POWER
 GL : GREEN LAMP FOR CLOSE BL : BLUE LAMP FOR REMOTE
 YL : YELLOW LAMP FOR FAULT
 RY1 : REMOTE MONITOR RELAY
 RY3 : FAULT RELAY
 RY2/RY4 : RUNNING RELAY
 © : MARKS FOR TERMINAL

**** LIMIT SWITCH CONTACT POSITIONS ****

ROTOR	CON-TACT	VALVE OPENING (%)	
		0	100
OPEN (OLS)	2-3		
	1-3		
CLOSE (CLS)	2-3		
	1-3		

— : CONTACT ON --- : CONTACT OFF