Replacing switch cartridge.


- Switch cartridges can only be exchanged by identical cartridges for repair purposes.
- See Installation guide DOC. IG.QC41.1 for further installation instructions.

Replacement procedure:


Before starting check that all the required parts are in-

Kit contents:	
Part number	Cartridge
FIELDQX2-C1	Mechanical switch
FIELDQX2-C2	Mechanical switch gold contact
FIELDQX2-C3	3-wire PNP switch
FIELDQX2-C4	3-wire NPN switch
FIELDQX2-C5	2-wire NAMUR switch
FIELDQX2-C6	230V proximity switch


1 Loosen the set screw before opening the cover with a 2 mm Allen key.

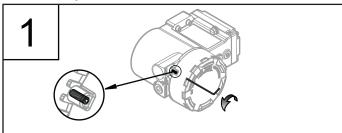


2 Unlock the switch cartridge turning the screw 90° with screw driver 0.8 X 4.0 Max.

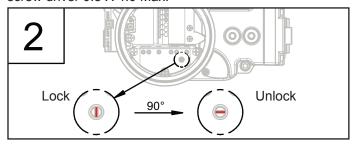


3 Loosen the 3 screws with a Phillips head no.2 screw driver.

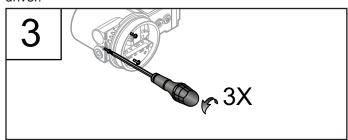


4 Check if the replacement is identical. Pull the switch cartridge gentle out of the module compartment.

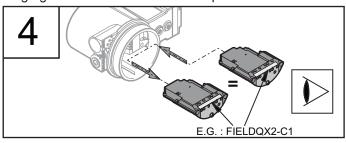


5 Notice the position of the pin before replacing a switch cartridge.

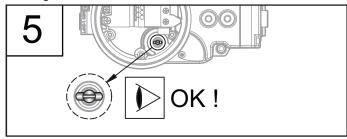

6 Gently place the switch cartridge and fasten the screws in sequence with a Phillip head no.2 screwdriver.

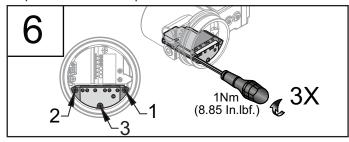

7 Lock the switch cartridge by gently turning the screw 90° with screw driver 0.8 X 4.0 Max.

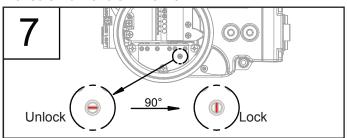

8 After switch cartridge replacement, mount and lock the cover to the module.

