

Bettis G01 through G10

Spring-Return Pneumatic Actuators with M18 Hydraulic Override



This page intentionally left blank.

Table of Contents

Section 1: Introduction

| | | |
|------|--|---|
| 1.1 | General Service Information | 1 |
| 1.2 | Definitions | 2 |
| 1.3 | General Safety Information | 2 |
| 1.4 | Bettis Reference Materials | 3 |
| 1.5 | Service Support Items | 3 |
| 1.6 | Lubrication and Fluid Requirements | 3 |
| 1.7 | General Tool Information | 4 |
| 1.8 | Actuator Storage..... | 4 |
| 1.9 | Actuator Installation | 4 |
| 1.10 | Actuator Start-Up..... | 5 |
| 1.11 | Actuator Operation | 6 |

Section 2: Actuator Disassembly

| | | |
|-----|---|----|
| 2.1 | General Disassembly | 7 |
| 2.2 | Pneumatic Power Module Disassembly | 8 |
| 2.3 | Drive Module Disassembly | 10 |
| 2.4 | G01 through G5 M18 Hydraulic Override Cylinder Disassembly..... | 13 |
| 2.5 | G7 through G10 M18 Hydraulic Override Cylinder Disassembly..... | 13 |
| 2.6 | M18 Pump Disassembly | 14 |
| 2.7 | M18 Reservoir Disassembly | 15 |

Section 3: Actuator Reassembly

| | | |
|-----|--|----|
| 3.1 | General Reassembly | 16 |
| 3.2 | Drive Module Reassembly | 16 |
| 3.3 | Pneumatic Power Module Reassembly | 21 |
| 3.4 | G2 and G3 Early Model Pneumatic Power Module Reassembly..... | 24 |
| 3.5 | G01 through G5 M18 Hydraulic Override Cylinder Reassembly..... | 27 |
| 3.6 | G7 through G10 M18 Hydraulic Override Cylinder Reassembly..... | 28 |
| 3.7 | Actuator Testing | 29 |

Section 4: Field Conversions

| | | |
|-----|--|----|
| 4.1 | Fail Mode Reversal (CW to CCW, or CCW to CW) | 31 |
| 4.2 | Converting Double-Acting Actuator to Spring-Return with Override Cylinder Assembly..... | 31 |

Section 5: Module Removal and Installation

| | | |
|-----|--|----|
| 5.1 | M18 Override Cylinder Removal | 32 |
| 5.2 | M18 Override Cylinder Installation | 33 |
| 5.3 | Spring Module Removal | 34 |
| 5.4 | Spring Module Installation | 35 |
| 5.5 | Pneumatic Power Module Removal | 38 |

| | | |
|-----|---|----|
| 5.6 | Pneumatic Power Module Installation | 39 |
| 5.7 | Power Swivel Removal | 40 |
| 5.8 | Power Swivel Module Installation | 40 |

Section 6: Actuator Support Information

| | | |
|------|---|----|
| 6.1 | M18 Hydraulic Override System Fluid Volume | 42 |
| 6.2 | Module Weights by Item Number and Actuator Housing Size | 42 |
| 6.3 | G01 Tool Style and Wrench Size | 43 |
| 6.4 | G2 Tool Style and Wrench Size..... | 44 |
| 6.5 | G3 Tool Style and Wrench Size..... | 44 |
| 6.6 | G4 Tool Style and Wrench Size..... | 45 |
| 6.7 | G5 Tool Style and Wrench Size..... | 45 |
| 6.8 | G7 Tool Style and Wrench Size..... | 46 |
| 6.9 | G8 Tool Style and Wrench Size..... | 46 |
| 6.10 | G10 Tool Style and Wrench Size | 47 |
| 6.11 | M18 Tool Style and Wrench Size | 47 |

Section 7: Troubleshooting

| | | |
|-----|-----------------------|----|
| 7.1 | Fault Insertion | 49 |
| 7.2 | Operational Test..... | 50 |

Section 8: Removal and Decommissioning

| | | |
|-----|-----------------------------------|----|
| 8.1 | Removal and Decommissioning | 51 |
|-----|-----------------------------------|----|

List of Tables

| | |
|----------------------|----|
| List of Tables | 52 |
|----------------------|----|

Appendix A: List of Drawings

| | | |
|------|---|----|
| A.1 | Part No. 121410, G1/2/3/4/5-SRX-H Pneumatic Assembly Drawing, Sheet 1 of 2 | 53 |
| A.2 | Part No. 121410, G1/2/3/4/5-SRX-H Pneumatic Assembly Drawing, Sheet 2 of 2 | 54 |
| A.3 | Part No. 121411, G7/8/10/13-SRX-H Pneumatic Assembly Drawing, Sheet 1 of 2 | 55 |
| A.4 | Part No. 121411, G7/8/10/13-SRX-H Pneumatic Assembly Drawing, Sheet 2 of 2 | 56 |
| A.5 | Part No. VA-ED-005-1120, M18 Assembly Drawing, Sheet 1 of 7 | 57 |
| A.6 | Part No. VA-ED-005-1120, M18 Assembly Drawing, Sheet 2 of 7 | 58 |
| A.7 | Part No. VA-ED-005-1120, M18 Assembly Drawing, Sheet 3 of 7 | 59 |
| A.8 | Part No. VA-ED-005-1120, M18 Assembly Drawing, Sheet 4 of 7 | 60 |
| A.9 | Part No. VA-ED-005-1120, M18 Assembly Drawing, Sheet 5 of 7 | 61 |
| A.10 | Part No. VA-ED-005-1120, M18 Assembly Drawing, Sheet 6 of 7 | 62 |
| A.11 | Part No. VA-ED-005-1120, M18 Assembly Drawing, Sheet 7 of 7 | 63 |

Section 1: Introduction

1.1 General Service Information

- 1.1.1** This service procedure is offered as a guide to enable general maintenance to be performed on Bettis™ G01XXX-SR, G2XXX SR, G3XXX SR, G4XXX SR, G5XXX SR, G7XXX SR, G8XXX SR, and G10XXX SR Spring-Return Series Single Pneumatic Power Module Actuators with M18 Hydraulic Override Module.
- 1.1.2** Normal recommended service interval for this actuator series is five years.

NOTE:

Storage time is counted as part of the service interval.

- 1.1.3** This procedure is applicable with the understanding that all electrical power and pneumatic pressure has been removed from the actuator.
- 1.1.4** Remove all piping and mounted accessories that will interfere with the module(s) that are to be worked on.
- 1.1.5** This procedure should only be implemented by a technically competent technician who should take care to observe good workmanship practices.
- 1.1.6** Numbers in parentheses, () indicate the bubble number (reference number) used on the Bettis assembly drawing and Actuator Parts List.
- 1.1.7** This procedure is written using the stop screw side of the housing (1 - 10) as a reference and this side will be considered the front side of the actuator. The housing cover (1 - 20) will be the top of the actuator.
- 1.1.8** Actuator module weights are listed in Section 6, Table 12.
- 1.1.9** When removing seals from seal grooves, use a commercial seal removing tool or a small screwdriver with sharp corners rounded off.
- 1.1.10** Use a non-hardening thread sealant on all pipe threads.

CAUTION

Follow manufacturer's instructions. Apply the thread sealant per the manufacturer's instructions.

- 1.1.11** Bettis recommends that disassembly of the actuator components should be done in a clean area on a work bench.

1.2 Definitions

WARNING

If not observed, user incurs a high risk of severe damage to actuator and/or fatal injury to personnel.

CAUTION

If not observed, user may incur damage to actuator and/or injury to personnel.

NOTE:

Advisory and information comments provided to assist maintenance personnel to carry out maintenance procedures.

1.3 General Safety Information

Products supplied by Bettis, in its “as shipped” condition, are intrinsically safe if the instructions contained within this Service Instruction are strictly adhered to and executed by well trained, equipped, prepared and competent personnel.

WARNING

Read warning signs. For the protection of personnel working on Bettis actuators, this procedure should be reviewed and implemented for safe disassembly and reassembly. Close attention should be noted to the WARNINGS, CAUTIONS and NOTES contained in this procedure.

WARNING

Follow plant safety procedures. This procedure should not supersede or replace any customer’s plant safety or work procedures. If a conflict arises between this procedure and the customer’s procedures the differences should be resolved in writing between an authorized customer’s representative and an authorized Bettis representative.

1.4 Bettis Reference Materials

- 1.4.1 Assembly Drawing for G2-SR-M18 through G5-SR-M18 model actuators with one Pneumatic Power Module and one Spring Module with M18 Hydraulic Override Module use part number 121410.
- 1.4.2 Assembly Drawing for G7-SR-M18 through G10-SR-M18 model actuators with one Pneumatic Power Module and one Spring Module with M18 Hydraulic Override Module use part number 121411.
- 1.4.3 M18 Manual Hydraulic Override System operating instructions part number VA-DC-000-1879 with M18 Assembly Drawing part number VA-ED-005-1120.

1.5 Service Support Items

- 1.5.1 Bettis module service kits.
- 1.5.2 For rod extension retainer nut tool part number, refer to the following Table.

NOTE:

These tools are required only when extension rod assembly (1 - 50) or (9 - 50) is removed or when a new extension rod assembly is installed.

Table 1. G-Series Models

| Actuator Model | Bettis Part Number |
|----------------|--------------------|
| G01 | None required |
| G2 | 123616 |
| G3 / G4 | 117370 |
| G5 / G7 | 117369 |
| G8 / G10 | 117368 |

- 1.1.1 Commercial leak testing solution.
- 1.1.2 Non-hardening thread sealant.

1.6 Lubrication and Fluid Requirements

NOTE:

Lubricants and Fluids, other than listed in step 1.6.1 and 1.6.2 should not be used without prior written approval of Bettis Product Engineering.

1.6.1 Lubricants:

All temperature services (-20 °F to +350 °F) / (-29 °C to 176 °C) use Bettis ESL 5 lubricant. ESL 5 lubricant is contained in the Bettis module service kit in tubes or cans and they are marked ESL 5 and 10 lubricant. For low temperature service (-40 °F to 150 °F) / (-40 °C to 65.6 °C) use ESL 15 lubricant. ESL 15 lubricant is contained in low temperature Bettis module service kits in tubes or cans and they are marked ESL 15 lubricant.

1.6.2 Fluids:

M18 Manual Hydraulic Override System Fluid Requirements: Standard and high temperature service (-20 °F to +350 °F) use Shell Tellus T-32 Automatic Transmission Fluid. For low temperature service (-40 °F to 150 °F) use Univis J13 or HVI 13 Hydraulic Fluid.

1.7 General Tool Information

- 1.7.1 Tools:** All tools / Hexagons are American Standard inch. Large adjustable wrench, two (2) large screwdrivers, Allen wrench set, set of open/box end wrenches, rubber or leather mallet, torque wrench (up to 1,200 lb-ft / 1,627 Nm), breaker bar, small drift punch and a drive socket set. For recommended tool and wrench sizes refer to Section 6, Tables 6.3 through 6.10.

1.8 Actuator Storage

For applications where the actuator is not placed into immediate service, it is recommended that the actuator be cycled with regulated clean/dry pneumatic pressure at least once per month. Indoor storage, if available, is recommended for all actuators. Care should be taken to plug all open ports on actuator and controls to keep out foreign particles and moisture. Actuators should not be stored in an atmosphere that is harmful to resilient seals. Contact factory for extended storage period.

1.9 Actuator Installation

- 1.9.1** Since there are many valve and actuator combinations, it is not practical to include detailed instructions for each type. Mountings are designed to be as simple as possible to keep the guess work out of the installation.
- 1.9.2** Actuators that are shipped from the factory with the travel stops adjusted for approximately ninety-degree rotation. Generally, it is necessary to make slight travel stop adjustments once the actuator is installed onto the valve. Refer to the valve manufacturer's recommendations for specific requirements. When the valve has internal stops, the actuator should be adjusted at the same points.

NOTE:

The actual "stopping" should be done by the actuator. If the valve does not have internal stops, adjust the actuator to the fully open position. Using this as a reference point, rotate the valve closed and adjust to the valve manufacturer's specifications for total rotation.

- 1.9.3** Good instrument practices are also recommended. Clean / dry regulated pneumatic pressure is essential for long service life and satisfactory operation. It should be noted that new pneumatic lines often have scale and other debris in them, and these lines should be purged of all foreign material.

NOTE:

Scale and debris can damage control valves, solenoids, and seals.

1.10 Actuator Start-Up

- 1.10.1** Prestart-up checks
1. Inspect to ensure the unit has been mounted onto valve properly. Gear flange mounting bolts, stem key, set screw(s) are installed and secured.
 2. No tubing damaged or accessories dislodged during the shipping or the installation.
 3. Indicated position confirms valve position.
 4. All switching valves in normal operating position as per SCHEMATIC / INSTRUCTIONS.

1.10.2 Check Connections

1. Pneumatic / hydraulic components connected as per schematic enclosed or in-service manual supplied.
2. Pneumatic supply connected to the identified ports.
3. Electrical connection terminals are secured.
4. Wiring as per enclosed diagram or service manual supplied.

1.10.3 When actuator is first placed into service, it should be cycled with regulated pneumatic pressure. This is necessary because the seals have been stationary, causing them to take a "set". Therefore, the actuator should be operated through several cycles to exercise the seals to achieve a service ready condition.

1.10.4 The actuator speed of operation is determined by several factors includes:

1. Power supply line length
2. Power supply line size
3. Power supply line pressure
4. Control valve and fitting orifice size
5. Torque requirements of the valve
6. Size of the actuator
7. Setting of speed controls
8. Hydraulic manual override (where available)

1.10.5 Due to the interaction of these variables, it is difficult to specify a "normal" operating time. Faster operating time may be obtained by using one or more of the following:

1. Larger supply lines
2. Larger control valve
3. Higher supply pressure *
4. Quick exhaust valves

* Not to exceed maximum operating pressure of actuator or control components

1.10.6 Slower operating time may be obtained by using flow control valves to meter the exhaust. Excessive exhaust flow metering may cause erratic operation.

1.11 Actuator Operation

1.11.1 Controlled Operation: Controlled operation is accomplished by pressurizing and/or depressurizing the appropriate cylinder inlet(s) of a Double-Acting. Do not exceed pressures indicated on actuator nameplate.

1.11.2 Manual Operation: All pressure must be vented or equalized on both sides of the pneumatic piston prior to manual operation.

Section 2: Actuator Disassembly

2.1 General Disassembly

WARNING

Dangerous gas and/or liquids. It is possible, that the actuator may contain a dangerous gas and/or liquid. Ensure that all proper measures have been taken to prevent exposure or release of these types of contaminants before commencing any work.

- 2.1.1** Section 2 - Actuator Disassembly is written to either completely disassemble the entire actuator or can be used to disassemble individual modules as needed (pneumatic power module or drive module).

WARNING

Do not remove compressed module. Do not remove spring module while spring is compressed.

- 2.1.2** When the spring module is to be removed it should be removed from the drive module prior to the pneumatic power module removal or disassembly.
- 2.1.3** The pneumatic power module can be disassembled while still attached to the drive module or the pneumatic power module can be removed from the drive module and disassembled separate to the actuator (refer to Section 5 - Module Removal and Installation).
- 2.1.4** To ensure correct reassembly; that is, with pneumatic power module or spring module on same end of drive module as was prior to disassembly, mark or tag right (or left) and mark mating surfaces.
- 2.1.5** For spring module removal and installation refer to Section 5, steps 5.3 and 5.4.

NOTE:

Use a means of capturing the hydraulic fluid that will be lost during the removal or disassembly of the override power module. Use a bucket, tub, or large container, etc.

2.2 Pneumatic Power Module Disassembly

NOTE:

Review Section 2, steps 2.1.1 through 2.1.5 General Disassembly before proceeding with Pneumatic Power Module Disassembly. Refer to drawings VA121410 or VA121411 for details.

WARNING

Remove all operating pressure. If not already removed disconnect all operating pressure from actuator power cylinders.

WARNING

Springs in extended position. The spring cartridge must be checked to verify that the spring(s) are in their extended position before the pneumatic power module is disassembled from the drive module (refer to Section 5.3, steps 5.3.7 through 5.3.9).

- 2.2.1 Mark and record location of the ports on outer end cap (3 - 80) and inner end cap (3 - 10).
- 2.2.2 If actuator is equipped with a power module mounted extended stop (ES) then rotate the ES until clear of the piston rod (3 - 40).
- 2.2.3 Remove breather assembly (12) from outer end cap (3 - 80).
- 2.2.4 Refer to assembly drawing sheet 2 Detail "E". Remove two socket cap screws (3 - 130), with lock washer (3 - 140), from outer end cap (3 - 80).
- 2.2.5 Remove two tie bar hex nuts (3 - 90) from outboard side of outer end cap (3 - 80).
- 2.2.6 The fit between cylinder (3 - 70) and outer end cap (3 - 80) is very tight. Break end cap free by tapping with a breaker bar on lip provided on the end cap. Remove outer end cap (3 - 80) from cylinder (3 - 70).

CAUTION

Do not damage O-ring groove when removing end cap from cylinder.

NOTE:

When removing cylinder (3 - 70) off piston (3 - 30), tilt the cylinder 15 to 30 degrees with respect to actuator centerline.

- 2.2.7 Remove cylinder (3 - 70) from inner end cap (3 - 10).

CAUTION

Do not use pipe wrench to remove tie bars.

2.2.8 TIE BAR REMOVAL:

2.2.8.1 Remove tie bars (3 - 20) as follows:

NOTE:

G01, G2, G3 and G4 models have flats on outboard end of tie bars (3 - 20) for wrench placement. G5 through G13 models have a female square on the outboard end of tie bars (3 - 20) for wrench placement.

2.2.8.2 Unscrew and remove tie bars (3 - 20) from inner end cap (3 - 10) and piston (3 - 30).

2.2.9 Remove piston as follows: (On early G2 and G3 models equipped with outboard and inboard tie bar nuts skip this step and go to step 2.2.10).

2.2.9.1 Refer to assembly drawing page 2 of 2 Detail "D". Remove two split ring halves (3 - 50) and one retainer ring (3 - 60) from outboard side of piston (3 - 30).

NOTE:

Piston (3 - 30) acts as the retainer for inboard split ring halves (3 - 50). When removing the piston be careful to not lose inboard split ring halves (3 - 50).

2.2.9.2 Remove piston (3 - 30) and two split ring halves (3 - 50) from piston rod (3-40).

NOTE:

Steps 2.2.10 is used only on early G2 and G3 models equipped with outboard and inboard tie bar nuts.

2.2.10 Remove early model G2 and G3 pistons as follows:

2.2.10.1 Refer to assembly drawing page 2 of 2 Detail "D". Remove two split ring halves (3 - 50) and one retainer ring (3 - 60) from inboard side of piston (3 - 30).

NOTE:

Piston (3 - 30) acts as the retainer for outboard split ring halves (3 - 50).

2.2.10.2 Slide piston (3 - 30) toward the inner end cap (3 - 10) until the outboard split ring halves are exposed enough for removal. Remove outboard split ring halves from piston rod (3 - 40).

2.2.10.3 Remove piston (3 - 30) and two split ring halves (3 - 50) from piston rod (3 - 40).

2.2.11 Remove O-ring seal (4 - 70) from piston rod (3 - 40).

2.2.12 Remove hex cap screws (3 - 100) with lock washers (3 - 110) from housing (1 - 10).

2.2.13 Remove inner end cap (3 - 10) off piston rod (3 - 40).

NOTE:

On early model G2 and G3 actuators remove two hex nuts (3 - 90) from housing (1 - 10). These two nuts will be loose after tie bars (3 - 20) are removed in step 2.2.8.1 and will be in the area where the piston rod passes through the housing (1 - 10).

NOTE:

The piston rod (3 - 40) removal as outlined in step 2.2.14 is only required when the piston rod is being replaced or when the drive module is to be disassembled.

2.2.14 Unscrew and remove piston rod (3 - 40) from drive module.

2.3 Drive Module Disassembly

NOTE:

Review Section 2, steps 2.1.1 through 2.1.5 General Disassembly before proceeding with Drive Module Disassembly. Refer to drawing VA138334.

2.3.1 If not already removed remove piston rod (3 - 40) from drive module.

2.3.2 Mark stop screws (1 - 180) left and right. The setting of stop screws (1 - 180) should be checked and setting recorded before stop screws are loosened or removed.

NOTE:

Stop screws will be removed later in this procedure.

NOTE:

For steps 2.3.3 through 2.3.10 refer to assembly drawing sheet 2 Section A-A and Detail "F".

- 2.3.3** Before removing position indicator (1 - 220), record or mark its position. Remove position indicator (1 - 220).

NOTE:

Step 2.3.4 is used only on G01, G2 and G3 drive modules. Drive modules G4 through G10 will skip step 2.3.4 and continue with step 2.3.5.

- 2.3.4** Remove one vent check assembly (13) from top of housing cover (1 - 20).
2.3.5 Unscrew and remove hex cap screws (1 - 160) with lock washers (1 - 170) from yoke cover (1 - 150).
2.3.6 Remove yoke cover (1 - 150) from housing cover (1 - 20).
2.3.7 Mark and record the orientation of the position indicator assembly (1 - 140) in relation to the top of yoke (1 - 70).
2.3.8 Remove position indicator assembly (1 - 140) from top of yoke (1 - 70).
2.3.9 Remove spring pin (1 - 100) from top of yoke (1 - 70).
2.3.10 Remove hex cap screws (1 - 110), with lock washers (1 - 115) from housing cover (1 - 20).

NOTE:

Steps 2.3.11 and 2.3.12 are used only on G7, G8 and G10 drive modules. Drive modules G01, G2, G3, G4 and G5 will skip steps 2.3.11 and 2.3.12 and continue with step 2.3.13.

- 2.3.11** Remove hex cap screws (1 - 120), with lock washers (1 - 115), from housing cover (1 - 20).
2.3.12 Using hex cap screws (1 - 110), install into holes vacated by hex cap screws (1 - 120). Use these hex cap screws to jack the housing cover up for removal. Alternately, rotate the hex cap screws clockwise until housing cover (1 - 20) is clear of housing (1 - 10).

NOTE:

G01, G2, G3 and G4 model housing cover will have cast tabs for placing prying tools to aid in cover removal.

- 2.3.13** Remove housing cover (1 - 20) from housing (1 - 10).

NOTE:

Groove pins (1 - 130) will remain in housing cover (1 - 20) when housing cover is removed from housing (1 - 10). Groove pins (1 - 130) should not be removed from housing cover (1 - 20) unless they are damaged and require new replacements.

- 2.3.14** Refer to assembly drawing page 2 of 2 Detail "B". Remove guide bar (1 - 90) from housing (1 - 10).
 - 2.3.15** Remove top yoke pin thrust bearing (2 - 10) from top of yoke pin (1 - 80).
 - 2.3.16** Rotate the arms of yoke (1 - 70) to the center position of housing (1 - 10).
 - 2.3.17** Remove yoke (1 - 70) with yoke pin (1 - 80), guide block (1 - 30), two yoke/guide block bushings (2 - 30) by lifting yoke up and out of the housing (1 - 10).
 - 2.3.18** Remove bottom yoke pin thrust bearing (2 - 10) from inside bottom of housing (1 - 10).
 - 2.3.19** Remove yoke pin (1 - 80) by inserting 3/8" - 16 UNC screw into top of the yoke pin and pull straight up and out.
 - 2.3.20** Remove guide block (1 - 30) from between the arms of yoke (1 - 70).
 - 2.3.21** Remove yoke/guide block bushing (2 - 30) from the top of guide block (1 - 30).
 - 2.3.22** Remove yoke/guide block bushing (2 - 30) from the top of the lower yoke arm of yoke (1 - 70).
-

NOTE:

G01 model actuators skip steps 2.3.23 through 2.3.25 and continue disassembly at step 2.3.26.

- 2.3.23** Refer to assembly drawing page 2 of 2 Detail "B". Use Bettis tool part numbers 117368 (G8 / G10), 117369 (G5 / G7), 117370 (G3 / G4) or 123616 (G2) and remove retention retainer nut assemblies (1-60) and (9-60) from guide block (1 - 30).
 - 2.3.24** Remove rod extension assemblies (1 - 50) and (9 - 50) from guide block (1 - 30).
-

NOTE:

Spherical washers (1 - 40) and (9 - 40) will be removed from guide block (1 - 30) when the extension rod assemblies are removed.

- 2.3.25** Remove the remaining spherical washers (1 - 40) and (9 - 40) from guide block (1 - 30).
- 2.3.26** Unscrew and remove two stop screw nuts (1 - 190) from stop screws (1 - 180).
- 2.3.27** Unscrew and remove two stop screws (1 - 180) from front of housing (1 - 10).

- 2.3.28** Housing (1 - 10) vent check assembly removal as follows:
- 2.3.28.1** G01, G2 and G3 housing (1 - 10) unscrew and remove one vent check assembly (13) from the front of housing (1 - 10).
 - 2.3.28.2** G4 through G10 housing (1 - 10) unscrew and remove two vent check assemblies (13) from the front of housing (1 - 10).
- 2.3.29** The following items do not need to be removed from their assembled locations unless being replaced by new items: Two guide bar bearings, two yoke bearings (2 - 40), yoke pin bearing, yoke pin thrust bearing (2 - 10) and spring pin (1 - 100).

2.4 G01 through G5 M18 Hydraulic Override Cylinder Disassembly

NOTE:

For M18 Hydraulic Override Cylinder removal from spring cartridge refer to Section 5, step 5.1. Refer to drawing VA122588 for details.

- 2.4.1** Unscrew hydraulic ram cover (7 - 10) from hydraulic override end cap (7 - 70).
- 2.4.2** Remove hydraulic ram (7 - 20) from hydraulic ram cover (7 - 10).

2.5 G7 through G10 M18 Hydraulic Override Cylinder Disassembly

NOTE:

For M18 Hydraulic Override Cylinder removal from spring cartridge refer to Section 5, step 5.1. Refer to drawing VA121411 for details.

- 2.5.1** Unscrew and remove hex cap screws (7 - 80) with lock washers (7 - 90) from outer end cap (7 - 70).
- 2.5.2** Remove outer end cap (7 - 70) from hydraulic cylinder assembly (7 - 10).
- 2.5.3** Remove piston rod (7 - 20) from hydraulic cylinder assembly (7 - 10).
- 2.5.4** Refer to assembly drawing sheet 1 Detail "G". Remove two split ring halves (7 - 30) and one retainer ring (7 - 40) from one side of piston (7 - 50).
- 2.5.5** Refer to assembly drawing sheet 1 Detail "G". Remove two split ring halves (7 - 30) and one retainer ring (7 - 40) from the other side of piston (7 - 50).
- 2.5.6** Remove piston (7 - 50) from piston rod (7 - 20).
- 2.5.7** Remove vent tube (7 - 60) from the hydraulic cylinder assembly.
- 2.5.8** Pipe plug (7 - 110) does not require removal for routine service.
- 2.5.9** Pipe plug (7 - 120) does not require removal for routine service.

2.6 M18 Pump Disassembly

NOTE:

Refer to dwg. VA-ED-005-1120 for details.

⚠ WARNING

Disconnect operating pressure. If not already removed, disconnect all operating pressure from actuator power cylinder.

- 2.6.1** Place the M18 pump control knob (25 - 200) in the auto position. Use dwg. VA-ED-005-1120 for this Section.
-

NOTE:

Control knob (25 - 200) is in front and at the bottom of the M18 pump manifold (20 - 10 - 10). Using a means of capturing the hydraulic fluid that will be lost during the following steps. Use a bucket, tub, or large container, etc.

- 2.6.2** Remove all the piping from the M18 override manifold (20 - 10 - 10) to the actuator and reservoir (10).
- 2.6.3** Remove mounting bracket (30 - 90) from the actuator.
- 2.6.4** Remove all counter-sunk cap screws (30 - 100) from the mounting bracket (30 - 90).
- 2.6.5** Remove acorn nut (25 - 450), lock washer (25 - 460), control knob (25 - 200) and control pointer (25 - 150) from the M18 override.
- 2.6.6** Remove socket cap screws (25 - 240) from the cover (25 - 140).
-

NOTE:

Note the bottom two access holes to reach socket cap screws are blocked by instruction tag (25 - 220) and will need to be removed and replaced (new instruction tag is provided in service kit).

- 2.6.7** Pull out quick release pin (20 - 10 - 110) from the pump handle lever (20 - 10 - 90).
- 2.6.8** Remove socket head cap screws (20 - 10 - 100) from the back brace (20 - 10 - 130).
- 2.6.9** Remove pipe plug (20 - 10 - 210), spring (20 - 10 - 360) and ball (20 - 10 - 350). If the back plate (20 - 10 - 320) is not coming out, use soft mallet to gently tap the open end of stem, control valve (20 - 10 - 280) in order to remove the back plate assembly and stem assembly.

NOTE:

The piston, control valve (20 - 10 - 310) is under spring tension and it will eventually pop out, user beware and find means to capture the piston (20 - 10 - 310), spring (20 - 10 - 390), washer bearing (20 - 10 - 380) and thrust bearing (20 - 10 - 370).

- 2.6.10** Remove flat head screw (20 - 10 - 330) from the manifold (20 - 10 - 10).
- 2.6.11** Remove disc, control valve (20 - 10 - 290) from the manifold (20 - 10 - 10).
- 2.6.12** Remove seal O-ring (20 - 20 - 40) from the manifold (20 - 10 - 10).
- 2.6.13** Remove seal O-ring (20 - 20 - 90) and backup ring (20 - 20 - 100) from back plate, control valve (20 - 10 - 320).
- 2.6.14** Remove seal O-ring (20 - 20 - 110) and backup ring (20 - 20 - 120) from piston, control valve (20 - 10 - 310).
- 2.6.15** Remove seal O-ring (20 - 20 - 40) and backup ring (20 - 20 - 50) from stem, control valve (20 - 10 - 280).
- 2.6.16** Remove pump rod (20 - 10 - 50) from pump cylinder (20 - 10 - 20).
- 2.6.17** Remove rod wiper (20 - 20 - 20), rod bushing (20 - 20 - 30) and Polypak seal (20 - 20 - 10) from the pump cylinder (20 - 10 - 20) bore.
- 2.6.18** Remove retainer ring (20 - 10 - 80) from manifold (20 - 10 - 10).
- 2.6.19** Use 1/4 - 20 UNC socket cap screw (20 - 10 - 240) as provided in service kit to remove the pin, cylinder (20 - 10 - 60) from the manifold (20 - 10 - 10). Remove the pump cylinder (20 - 10 - 20).
- 2.6.20** Remove seal O-ring (20 - 20 - 40) and backup ring (20 - 20 - 50) from the pin, cylinder (20 - 10 - 60).
- 2.6.21** Remove seal O-ring (20 - 20 - 60) and backup ring (20 - 20 - 70) from the pump cylinder (20 - 10 - 20).

2.7 M18 Reservoir Disassembly

- 2.7.1** Remove acorn nut (10 - 50), counter sink washer (10 - 60) and thread seal (10 - 70) from the end cap, upper (10 - 10).
- 2.7.2** Remove end cap, bottom (10 - 40) by tapping from the open end of center bar (10 - 30).
- 2.7.3** Remove seal O-ring (10 - 100) from the end cap, bottom (10 - 40).
- 2.7.4** Remove end cap, upper (10 - 10) from the reservoir cylinder (10 - 20).
- 2.7.5** Remove seal O-ring (10 - 100) from the end cap, upper (10 - 10).

Section 3: Actuator Reassembly

3.1 General Reassembly

CAUTION

Check shelf life of seals. Only new seals, which are still within the seal's expectant shelf life, should be installed into the actuator being refurbished.

- 3.1.1 Remove and discard all old seals.
- 3.1.2 All parts should be cleaned to remove all dirt and other foreign material prior to inspection.
- 3.1.3 All parts should be thoroughly inspected for excessive wear, stress cracking, galling and pitting. Attention should be directed to threads, sealing surfaces and areas that will be subjected to sliding or rotating motion. Sealing surfaces of the cylinder, tie bars and piston rod must be free of deep scratches, pitting, corrosion and blistering or flaking coating.

CAUTION

Inspect parts before use. Actuator parts that reflect any of the above listed characteristics should be replaced with new parts.

- 3.1.4 Before installation coat all moving parts with a complete film of lubricant. Coat all seals with a complete film of lubricant, before installing into seal grooves.

NOTE:

The parts and seals used in the actuator will be assembled using lubricant as identified in Section 1, step 1.6.1.

- 3.1.5 For spring module installation refer to Section 5, step 5.4.

3.2 Drive Module Reassembly

NOTE:

Review Section 3.1, General Reassembly before proceeding with Drive Module Reassembly.

NOTE:

Refer to assembly drawing page 2 of 2 Detail "B" for section drawing of guide block.

- 3.2.1** If guide bar bearings are being replaced install new bearings into guide block (1 - 30).

NOTE:

The guide bar bearing must be press fit into guide block guide bar bore with the seam located 45 ± 5 degrees of the top or bottom centerline as shown in Section A-A.

NOTE:

G01 model actuators skip steps 3.2.2 through 3.2.13 and continue reassembly at step 3.2.14.

- 3.2.2** Lubricate guide block (1 - 30), two spherical washers (1 - 40), and one extension rod assembly (1 - 50).

- 3.2.3** Install one spherical washer (1 - 40) into the side of guide block (1 - 30).

NOTE:

The spherical side of washer (1 - 40) will be facing to the outside of guide block (1 - 30).

- 3.2.4** Install second spherical washer (1 - 40) over threaded end of extension rod assembly (1 - 50).

NOTE:

The spherical side of the washer will go on the extension rod assembly facing the head of the extension rod assembly.

- 3.2.5** Install extension rod assembly (1 - 50) into guide block (1 - 30) and up against the first spherical washer (1 - 40).

- 3.2.6** Install extension retainer nut (1 - 60) over extension rod assembly (1 - 50) and screw into guide block (1 - 30).

- 3.2.7** Tighten extension retainer nut assembly (1 - 60) until extension rod assembly (1 - 50) cannot move. Back off the extension retainer nut assembly (1 - 60) just enough to allow for extension rod assembly (1 - 50) to move freely.

NOTE:

Steps 3.2.8 through 3.2.13 are to be completed when the actuator is equipped with a spring module. If the actuator is Double-Acting, then skip steps 3.2.8 through 3.2.13 and continue actuator reassembly starting with step 3.2.14.

3.2.8 Lubricate guide block (1 - 30), two spherical washers (9 - 40) and one extension rod assembly (9 - 50).

3.2.9 Install one spherical washer (9 - 40) into the side of guide block (1 - 30).

NOTE:

The spherical side of washer (9 - 40) will be facing to the outside of guide block (1 - 30).

1.1.1 Install second spherical washer (9 - 40) over threaded end of extension rod assembly (9 - 50).

NOTE:

The spherical side of the washer will go on the extension rod assembly facing the head of the extension rod assembly.

3.2.10 Install extension rod assembly (9 - 50) into guide block (1 - 30) and up against the first spherical washer (9 - 40).

3.2.11 Install extension retainer nut (9 - 60) over extension rod assembly (9 - 50) and screw into guide block (1 - 30).

3.2.12 Tighten extension retainer nut assembly (9 - 60) until extension rod assembly (9 - 50) cannot move. Back off the extension retainer nut assembly (9 - 60) just enough to allow for extension rod assembly (9 - 50) to move freely.

NOTE:

Consult Houston, Texas Bettis Service Coordinator for "yoke bearing, yoke pin bearing or yoke/guide block bushing installation information".

3.2.13 If the two yoke bearings (2 - 40) are being replaced, install new bearing into housing cover (1 - 20) and housing (1 - 10).

NOTE:

The yoke bearing (2 - 40) must be press fit into housing (1 - 10) and housing cover (1 - 20). Install the yoke bearings with the bearing seam located 45 ± 5 degrees from the yoke arm slot when yoke (1 - 70) is rotated to its full clockwise position.

3.2.14 If the two yoke pin thrust bearings (2 - 10) are being replaced install new bearing into housing cover (1 - 20) and housing (1 - 10).

3.2.15 Lubricate two yoke / guide block bushings (2 - 30) and install onto top and bottom sides of guide block (1 - 30).

NOTE:

The guide block (1 - 30) should be already preassembled with extension rod assembly and associated parts assembled in the guide block.

- 3.2.16** Install guide block (1 - 30), with yoke/guide block bushings (2 - 30), between arms of yoke (1 - 70).
 - 3.2.17** Install O-ring seal (2 - 50) into inner diameter O-ring groove in the bottom of housing (1 - 10).
 - 3.2.18** Coat the bearing surfaces of the yoke (1 - 70) with lubricant and install into housing (1 - 10).
 - 3.2.19** Align hole in guide block (1 - 30) with the matching holes in the two yoke / guide block bushings (2 - 30) and the slots in the arms of yoke (1 - 70).
-

NOTE:

The yoke pin can be held in place by installing a screw into the .375 - 16 UNC tapped hole in the upper end of yoke pin (1 - 80).

- 3.2.20** Install yoke pin (1 - 80) by inserting into the upper yoke arm, upper yoke / guide block bushing, guide block, lower yoke / guide block bushing, lower yoke arm and resting on lower yoke pin thrust bearing (2 - 10).
 - 3.2.21** Install guide bar (1 - 90) into either side of housing (1 - 10) by inserting through the housing, through guide block and then insert the guide bar into the other side of housing (1 - 10).
 - 3.2.22** Refer to assembly drawing page 2 of 2 Section A-A. Install spring pin (1 - 100) into the top of yoke (1 - 70).
 - 3.2.23** Install position indicator assembly (1 - 140) onto the top of yoke (1 - 70) and over spring pin (1 - 100).
-

NOTE:

Refer to Section 2, step 2.3.7 for correct installation position.

- 3.2.24** Install O-ring (2 - 50) into housing cover (1 - 20).
 - 3.2.25** Install housing cover O-ring (2 - 60) into housing cover (1 - 20).
 - 3.2.26** Install the housing cover (1 - 20), being careful not to damage O-ring seals (2 - 50) and (2 - 60).
 - 3.2.27** Place lock washers (1 - 115) onto hex cap screws (1 - 110).
-

NOTE:

On G7 through G10 model actuators apply thread adhesive, Loctite 242, to threads of hex cap screws (1 - 110). Reference assembly drawing note number 9.

- 3.2.28** Install hex cap screws (1 - 110) with lock washers (1 - 115) through housing cover (1 - 20) and into housing (1 - 10).

NOTE:

Leave hex cap screws (1 - 110) finger tight - do not tighten.

- 3.2.29** **NOTE: Do this step only if groove pins (1 - 130) have been pulled or if the pins are being replaced.** Drive groove pins (1 - 130) through housing cover (1 - 20) and into housing (1 - 10). The groove pins should be flush with the cover.

- 3.2.30** Torque tighten hex cap screws (1 - 110) until a final lubricated torque, as listed in Table 2 has been achieved.

Table 2. Housing Cover Screw Quantity and Torque

| Model | Qty. | Torque ($\pm 5\%$) | | Model | Qty. | Torque ($\pm 5\%$) | |
|-------|------|----------------------|----|-------|------|----------------------|-----|
| | | lb-ft | Nm | | | lb-ft | Nm |
| G01 | 4 | 40 | 54 | G5 | 8 | 100 | 136 |
| G2 | 6 | 40 | 54 | G7 | 8 | 100 | 136 |
| G3 | 8 | 40 | 54 | G8 | 12 | 100 | 136 |
| G4 | 8 | 40 | 54 | G10 | 16 | 100 | 136 |

NOTE:

Complete step 3.2.32 on G5 through G10 model actuators. For G01 through G4 model actuators, skip step 3.2.32 and proceed to step 3.2.33.

- 3.2.31** On G5 through G10 models;
3.2.31.1 Place lock washers (1 - 115) onto hex cap screws (1 - 120).

NOTE:

Hex cap screws (1 - 120) are only used as "hole" fillers and to protect threads from environment.

- 3.2.31.2** Install and tighten hex cap screws (1 - 120) with lock washers (1 - 115).
- 3.2.32** Install thrust bearing (2 - 110) onto position indicator (1 - 140).
- 3.2.33** Install O-ring seal (2 - 100) onto position indicator (1 - 140).
- 3.2.34** Install upper bearing (2-120) into yoke cover (1-150).
- 3.2.35** Install rod wiper (2 - 80) into yoke cover (1 - 150).
- 3.2.36** Install O-ring seal (2 - 70) into yoke cover (1 - 150).
- 3.2.37** Install yoke cover (1 - 150) onto housing cover (1 - 20) and over position indicator assembly (1 - 140).

NOTE:

During yoke cover installation be careful not to damage O-ring seal (2 - 70) and rod wiper (2 - 80).

- 3.2.38 Place lock washers (1 - 170) onto hex cap screws (1 - 160).
- 3.2.39 Install and tighten hex cap screws (1 - 160) with lock washers through yoke cover (1 - 150) and into housing cover (1 - 20).
- 3.2.40 Vent check assembly installation as follows:
 - 3.2.40.1 G01, G2 and G3 housing (1 - 10) using pipe sealant install one vent check assembly (13) into the front of housing (1 - 10).
 - 3.2.40.2 G01, G2 and G3 housing (1 - 10) using pipe sealant install one vent check assembly (13) into the top area of housing cover (1 - 20).
 - 3.2.40.3 G4 through G10 housing (1 - 10) using pipe sealant install two vent check assemblies (13) into the front of housing (1 - 10).
- 3.2.41 **NOTE: Refer to Section 2, step 2.3.3 for correct position indicator placement.** Install position indicator (1 - 220) over the exposed shaft of position indicator assembly (1 - 140).
- 3.2.42 Install stop screw nuts (1 - 190) onto stop screws (1 - 180).
- 3.2.43 Install O-ring (2 - 90) onto stop screws (1 - 180).
- 3.2.44 Install two stop screws (1 - 180) into two stop screw holes on the front of housing (1-10).
- 3.2.45 Adjust both stop screws (1 - 180) back to settings recorded earlier in Section 2 at step 2.3.2.
- 3.2.46 Tighten both stop screw nuts (1 - 190) securely.

3.3 Pneumatic Power Module Reassembly

NOTES:

- 1. For early model G2 and G3 actuators with double nuts on the power module use Section 3.4 for reassembly.
 - 2. Refer to Section 2, step 2.1.4 for the correct installation location for piston rod (3 - 40).
 - 3. THE ACTUATOR MUST BE IN THE APPROPRIATE OVERTRAVEL POSITION. Confirm overtravel position by observing the guide block (1 - 30) is against the inner wall of housing (1 - 10).
-
- 3.3.1 Lubricate piston rod (3 - 40) and insert through the side of housing (1 - 10).
 - 3.3.1.1 G2 thru G10 screw piston rod (3 - 40) onto extension rod assembly (1 - 50).
 - 3.3.1.2 G01 only screw piston rod (3 - 40) into guide block (1 - 30).

3.3.2 Torque tighten piston rod (3 - 40) to the lubricated torque as listed in Table 3.

Table 3. Piston Rod Torque Information

| Housing Model | Torque ($\pm 5\%$) | | Housing Model | Torque ($\pm 5\%$) | |
|---------------|----------------------|-----|---------------|----------------------|-----|
| | lb-ft | Nm | | lb-ft | Nm |
| G01 | 90 | 122 | G5 | 240 | 325 |
| G2 | 90 | 122 | G7 | 240 | 325 |
| G3 | 90 | 122 | G8 | 240 | 325 |
| G4 | 240 | 325 | G10 | 240 | 325 |

⚠ CAUTION

Polypak seal facing piston side. Install the Polypak seal with energizer ring facing piston side of inner end cap (3 - 10).

3.3.3 Install one O-ring seal (4 - 90) into seal groove located on the inboard face of inner end cap (3 - 10).

3.3.4 Install inner end cap (3 - 10) on to housing (1 - 10).

NOTE:

The pressure inlet port should be positioned in the same position as recorded in Section 2.2, step 2.2.1.

3.3.5 Place lock washers (3 - 110) onto hex cap screws (3 - 100).

3.3.6 Install hex cap screws (3 - 100), with lock washers, through housing (1 - 10) and into inner end cap (3 - 10).

3.3.7 Refer to assembly drawing page 2 of 2 Detail "D". Install one O-ring seal (4 - 70) into the seal groove in piston rod (3 - 40).

3.3.8 Apply lubricant to two sets of rod T-seal components (4 - 50).

NOTE:

The T-seal is composed of one rubber seal and two split skive-cut back-up rings.

3.3.8.1 Install two sets of rod T-seals (4-50) into the internal diameter seal grooves of piston (3-30).

3.3.8.2 Install a back-up ring on each side of the T-seal.

3.3.8.3 When installing the back-up rings, do not align the skive-cuts.

3.3.8.4 If the back-up rings are too long and the rings overlap beyond the skive-cuts, then the rings must be trimmed with a razor-sharp instrument.

- 3.3.9** Install two split ring halves (3 - 50) into the inner most groove in piston rod (3 - 40) and retain by installing the recessed area of piston (3 - 30) onto the piston rod and over the two split ring halves (3 - 50).
- 3.3.10** Install two split ring halves (3 - 50) into the piston rod, in front of the piston installed in the previous step and retain with retainer ring (3 - 60).
- 3.3.11** Install one O-ring seal (4 - 40) onto the outer diameter seal groove of inner end cap (3 - 10).
- 3.3.12** Coat one D-ring seal (4 - 60) with lubricant and install into the piston external seal groove.

NOTE:

The flat side of the D-ring seal goes down into the seal groove.

- 3.3.13** Coat two tie bars (3 - 20) with lubricant and install by carefully pushing tie bars through piston (3 - 30) and rod T-seal (4 - 50).
- 3.3.14** Screw tie bars (3 - 20) into inner end cap (3 - 10) and tighten until the threads bottom out.
- 3.3.15** Refer to assembly drawing page 2 of 2 Detail "E". Coat two O-ring seals (4 - 80) with lubricant and install into outer end cap (3 - 80).
- 3.3.16** Apply lubricant to one O-ring seal (4 - 40) and install into the outer diameter O-ring groove of outer end cap (3 - 80).
- 3.3.17** Apply lubricant to the bore of cylinder (3 - 70).
- 3.3.18** Install lubricated cylinder (3 - 70) over piston (3 - 30) and onto inner end cap (3 - 10). When installing the cylinder over the piston seal tilt cylinder 15 to 30 degrees to piston rod.

⚠ CAUTION

Carefully install cylinder. If needed, when installing the cylinder, hammer on the end of the cylinder only with a nonmetallic object.

- 3.3.19** Install outer end cap (3 - 80) over tie bars (3 - 20) and into cylinder (3 - 70).

NOTE:

The pressure inlet port should be positioned in the same position as recorded in Section 2.2, step 2.2.1.

- 3.3.20** Install tie bar nuts (3 - 90) onto tie bars (3 - 20). Torque tighten tie bar nuts, alternately in 100 lb-ft / Nm increments, until a final lubricated torque, as listed in Table 4, has been achieved.

Table 4. Tie Bar Nuts

| Housing Model | Torque ($\pm 5\%$) | | Housing Model | Torque ($\pm 5\%$) | |
|---------------|----------------------|-----|---------------|----------------------|-------|
| | lb-ft | Nm | | lb-ft | Nm |
| G01 | 120 | 163 | G5 | 400 | 542 |
| G2 | 120 | 163 | G7 | 500 | 678 |
| G3 | 150 | 203 | G8 | 500 | 678 |
| G4 | 150 | 203 | G10 | 1,200 | 1,627 |

- 3.3.21** Install lock washers (3 - 140) onto socket cap screws (3 - 130).
- 3.3.22** Install and tighten socket cap screws (3 - 130), with lock washers (3 - 140), into outer end cap (3 - 80).
- 3.3.23** If removed, using pipe dope, install pipe plug (3 - 120) into outer end cap (3 - 80).
- 3.3.24** Apply sufficient pneumatic pressure to outer end cap (3 - 80) pressure inlet port to move the piston to its full inboard position (next to inner end cap).
- 3.3.25** Remove pneumatic pressure from outer end cap (3 - 80).
- 3.3.26** Install breather assembly (12) in outer end cap (3 - 80).

NOTE:

Individual actuators may not have reducer bushing (14) depending on port and breather size.

3.4 G2 and G3 Early Model Pneumatic Power Module Reassembly

NOTE:

1. Early G2 and G3 pneumatic power modules were equipped with tie bars that had nuts on both ends of the tie bars (3 - 20) – double nuts.
2. Refer to Section 2, step 2.1.4 for the correct installation location for piston rod (3 - 40).
3. THE ACTUATOR MUST BE IN THE APPROPRIATE OVERTRAVEL POSITION. Confirm over-travel position by observing the guide block (1 - 30) is against the inner wall of housing (1 - 10).
4. Refer to drawing VA121410 for details.

- 3.4.1** Refer to assembly drawing page 2 of 2 Detail "C". Install one rod wiper (4 - 10) into inner end cap (3 - 10).
- 3.4.2** Install one rod bushing (4 - 20) into inner end cap (3 - 10).
- 3.4.3** Coat one Polypak seal (4 - 30) with lubricant and install, lip first, into inner end cap (3 - 10).

CAUTION

Install Polypak seal correctly. Install the Polypak seal with energizer ring facing outboard side of inner end cap (3 - 10).

3.4.4 Install piston rod (3 - 40) through inner end cap (3 - 10).

NOTE:

The piston rod end with retainer grooves to be on the outboard side of inner end cap (3 - 10).

3.4.5 Apply lubricant to two sets of rod T-seal components (4 - 50).

NOTE:

The T-seal is composed of one rubber seal and two split skive-cut back-up rings.

3.4.5.1 Install two sets of rod T-seals (4 - 50) into the internal diameter seal grooves of piston (3 - 30).

3.4.5.2 Install a back-up ring on each side of the T-seal.

3.4.5.3 When installing the back-up rings, do not align the skive-cuts.

3.4.5.4 If the back-up rings are too long and the rings overlap beyond the skive-cuts, then the rings must be trimmed with a razor-sharp instrument.

3.4.6 Coat one D-ring seal (4 - 60) with lubricant and install into the piston external seal groove.

NOTE:

The flat side of the D-ring seal goes down into the seal groove.

3.4.7 Install piston (3 - 30) onto piston rod (3 - 40).

NOTE:

The cast rib side of the piston is to be facing away from the outboard side of inner end cap (3 - 10) or position piston (3 - 30) on the piston rod so that the retainer grooves are on the outboard side of the piston.

3.4.8 Refer to assembly drawing page 2 of 2 Detail "D". Install O-ring seal (4 - 70) into the seal groove in the outboard end of piston rod (3 - 40).

3.4.9 Install two split ring halves (3 - 50) into the outer most groove in piston rod (3 - 40) and retain by installing the recessed area of piston (3 - 30) over the two split halves (3 - 50).

- 3.4.10** Install two split ring halves (3-50) into the piston rod, behind the piston and retain with retainer ring (3-60).
- 3.4.11** Coat two tie bars (3-20) with lubricant and install by carefully pushing tie bars through piston (3-30) and rod T-seal (4-50).
- 3.4.12** Install two tie bar O-ring seals (4-80) onto the inboard end of tie bars (3-20) and into the O-ring grooves provided.
- 3.4.13** Insert the tie bars through inner end cap (3-10) and screw hex nuts (3-90) onto inboard end of the tie bars.

NOTE:

Screw the tie bars through the hex nuts (3 - 90) until one complete thread is exposed.

- 3.4.14** Refer to assembly drawing page 2 of 2 Detail "E". Install two tie bar O-ring seals (4 - 80) onto the outboard end of tie bars (3 - 20) and into the O-ring grooves provided.
- 3.4.15** Apply lubricant to one O-ring seal (4 - 40) and install into the outer diameter O-ring groove of outer end cap (3 - 80).
- 3.4.16** Apply lubricant to the bore of cylinder (3 - 70).
- 3.4.17** Install lubricated cylinder (3 - 70) over piston (3 - 30) and onto inner end cap (3 - 10). When installing the cylinder over the piston seal tilt cylinder 15 to 30 degrees to piston rod.

⚠ CAUTION

Carefully install cylinder. If needed, when installing the cylinder, hammer on the end of the cylinder only with a nonmetallic object.

- 3.4.18** Install outer end cap (3 - 80) over tie bars (3 - 20) and into cylinder (3 - 70).

NOTE:

The pressure inlet port should be positioned in the same position as recorded in Section 2.2, step 2.2.1.

- 3.4.19** Install tie bar nuts (3 - 90) onto tie bars (3 - 20). Torque tighten tie bar nuts, alternately in 100 lb-ft increments, until a final lubricated torque, as listed in the following Table, has been achieved.

Table 5. G2 Tie Bar Nuts

| Housing Model | Torque (±5%) | | Housing Model | Torque (±5%) | |
|---------------|--------------|-----|---------------|--------------|-----|
| | lb-ft | Nm | | lb-ft | Nm |
| G2 | 120 | 163 | G3 | 150 | 203 |

- 3.4.20** Install lock washers (3 - 140) onto socket cap screws (3 - 130).
- 3.4.21** Install and tighten socket cap screws (3 - 130), with lock washers (3 - 140), into outer end cap (3 - 80).
- 3.4.22** Install pneumatic power module per Section 5, steps 5.4.

3.5 G01 through G5 M18 Hydraulic Override Cylinder Reassembly

NOTE:

Review Section 3.1, General Reassembly before proceeding with G01 through G5 M18 Hydraulic Override Cylinder Reassembly.

- 3.5.1** Install ram bushing (8 - 20) into hydraulic ram cover (7 - 10).
- 3.5.2** Install Polypak seal (8 - 30) into hydraulic ram cover (7 - 10).

NOTE:

The lip of Polypak seal (8 - 30) are to face toward the hydraulic override end cap when installed in the hydraulic ram cover.

- 3.5.3** Install rod wiper (8 - 10) into hydraulic ram cover (7 - 10).
- 3.5.4** Install hydraulic ram (7 - 20) into hydraulic ram cover (7 - 10).

NOTE:

When installing the hydraulic ram (7 - 20) push it through the hydraulic ram cover until the ram is at least flush with the outboard ram cover.

- 3.5.5** Install O-ring seal (8 - 35) into inner diameter seal groove located at the outboard end of the threads in the hydraulic override end cap (7 - 70).
- 3.5.6** Install hydraulic ram cover (7 - 10) into the hydraulic override end cap (7 - 70) by screwing the ram cover into the end cap until the ram cover bottoms out into the end cap.

NOTE:

For M18 Hydraulic Override Cylinder installations refer to Section 5, step 5.2.

3.6 G7 through G10 M18 Hydraulic Override Cylinder Reassembly

NOTE:

Review Section 3 step 3.1, General Reassembly before proceeding with G7 through G10 M18 Hydraulic Override Cylinder Reassembly.

3.6.1 Install Polypak seal (8 - 30) into hydraulic cylinder assembly (7 - 10).

NOTE:

The lip of Polypak seal (8 - 30) will face toward the hydraulic override end cap when installed in the hydraulic cylinder assembly.

3.6.2 Install rod bushing (8 - 20) into hydraulic cylinder assembly (7 - 10).

3.6.3 Install rod wiper (8 - 10) into hydraulic cylinder assembly (7 - 10).

3.6.4 Install two split ring halves (7 - 30) into the inner most groove in piston rod (7 - 20) and retain by installing retainer ring (7 - 40) onto the split ring halves.

3.6.5 Apply hydraulic fluid to O-ring seal (8 - 50) and install it into the seal groove located between the two split ring grooves on the piston rod (7 - 20).

3.6.6 Install the piston (7 - 50) onto the piston rod (7 - 20) and up against the split rings install in step 3.5.4.

3.6.7 Install two split ring halves (7 - 30) into the outboard groove in piston rod (7 - 20) and retain by installing retainer ring (7 - 40) onto the split ring halves.

3.6.8 Install Polypak seal (8 - 60) into outer diameter seal groove of piston (7 - 50).

NOTE:

The lip of Polypak seal (8 - 60) will face toward the hydraulic override outer end cap (7 - 70) when installed in the hydraulic cylinder assembly.

3.6.9 Install piston bearing (8 - 40) into outer diameter bearing groove of piston (7 - 50).

3.6.10 Install O-ring seal (8 - 80) into inner diameter seal groove located in the piston (7 - 50).

3.6.11 Use pipe dope on the threads install pipe plug (7 - 110) into the vent tube hole in the inboard end of the hydraulic cylinder assembly (7 - 10).

3.6.12 Install vent tube (7 - 60) into the hydraulic cylinder assembly inboard end.

3.6.13 Install the assembled piston rod (7 - 20) with piston (7 - 50) into the open end of the hydraulic cylinder assembly and install the piston over the vent tube (7 - 60).

3.6.14 Install O-ring seal (8 - 90) into the vent tube port located in the outer end cap (7 - 70).

- 3.6.15** Install O-ring seal (8 - 70) into the O-ring groove located on the inner diameter of the hydraulic cylinder assembly flange opening.
- 3.6.16** Install the outer end cap (7 - 70) assembled piston rod (7 - 20) with piston (7 - 50) onto the open end of the hydraulic cylinder assembly and over the vent tube (7 - 60).
- 3.6.17** Install lock washers (7-90) onto hex cap screws (7-80).
- 3.6.18** Install and tighten hex cap screws (7-80), with lock washers (7-90) through outer end cap (7-70) and into hydraulic cylinder assembly.

NOTE:

For M18 Hydraulic Override Cylinder installations refer to Section 5, step 5.2.

1.1 Actuator Testing

- 3.6.19** Leakage Test - All areas where leakage to atmosphere may occur are to be checked, using a commercial leak testing solution.

CAUTION

Do not exceed maximum pressure. Pressure applied to the actuator is not to exceed the maximum operating pressure rating listed on the actuator name tag. Test the actuator using a properly adjusted self-relieving regulator, with gauge.

- 3.6.20** Cycle the actuator five times at the maximum operating pressure (MOP) as listed on the actuator's name tag or the customer's normal actuator supply pressure. If excessive leakage across the piston is noted, generally a bubble which breaks three seconds or less after starting to form, cycle the actuator five times as this will allow the seals to seek their proper service condition.

NOTE:

If excessive leakage across the piston remains, the actuator must be disassembled, and the cause of leakage must be determined and corrected.

- 3.6.21** Apply MOP pressure to the pressure port in inner end cap (3 - 10) and allow the actuator to stabilize.
- 3.6.22** Apply a commercial leak testing solution to the following areas:
 - 3.6.22.1** Joint between inner end cap (3 - 10) and cylinder (3 - 70). This checks cylinder to inner end cap O-ring seal.
 - 3.6.22.2** The port hole in the outer end cap (3 - 80). This checks the piston D-seal to cylinder (3 - 70), O-ring seal (4 - 70), and rod T-seal (4 - 50).

- 3.6.22.3** The vent check port hole in housing. This checks Polypak seal (4 - 30) that seals piston rod (3 - 40) to inner end cap (3 - 10).
- 3.6.22.4** Remove pressure from the pressure inlet port.
- 3.6.23** If an actuator was disassembled and repaired, the above leakage test must be performed again.
- 3.6.24** Shell Pressure Test – Optional pressure test could be performed on PED certified actuator by applying pressure to both sides of the piston simultaneously for a period of two (2) minutes. If any leakage occurs across a static seal, the unit must be disassembled, and the cause of leakage determined and corrected.

WARNING

PED pressure testing. The actuators main pressure bearing parts will be tested in controlled conditions in accordance with the requirement of PED by pressuring both sides of the piston to avoid damage and over torquing of the actuator components. If further future testing in the field is necessary, Emerson should be contacted for guidance.

Section 4: Field Conversions

4.1 Fail Mode Reversal (CW to CCW, or CCW to CW)

- 4.1.1 Remove spring module per Section 5.3.
- 4.1.2 Remove pneumatic power module per Section 5.5.
- 4.1.3 Reinstall the spring module onto the opposite end of housing (1 - 10) as it was previously located per Section 5.4.
- 4.1.4 Reinstall the override cylinder assembly into spring module per Section 5.2.

4.2 Converting Double-Acting Actuator to Spring-Return with Override Cylinder Assembly

- 4.2.1 Remove Blind End Cap per steps 4.2.1.1 and 4.2.1.2.
 - 4.2.1.1 Remove hex cap screws (5 - 20), with spring lock washers (5 - 30), from blind end cap (5 - 10).
 - 4.2.1.2 Remove blind end cap (5 - 10) from end of housing (1 - 10).
- 4.2.2 If pneumatic power module needs to be relocated due to fail mode requirements (fail counterclockwise) use Section 5.5 for removal and Section 5.6 for installation.
- 4.2.3 Install Power Swivel module per Section 5.8.
- 4.2.4 Install the spring module onto the end of housing (1 - 10) per Section 5.4.
- 4.2.5 Install the override cylinder assembly into spring module per Section 5.2.

Section 5: Module Removal and Installation

5.1 M18 Override Cylinder Removal

- 5.1.1 Shut off and exhaust the operating media from both sides of the actuator's power cylinder.
- 5.1.2 Place the M18 pump control knob (25 - 200) in the auto position.

NOTE:

Control knob (25 - 200) is in front and at the bottom of the M18 pump manifold (20 - 10 - 10).

NOTE:

Using a means of capturing the hydraulic fluid that will be lost during the following steps. Use a bucket, tub, and large container, etc.

- 5.1.3 Remove all the piping from the M18 override cylinder end cap (7 - 70).
- 5.1.4 M18 Hydraulic Override Cylinder removal: For models G01 through G5, use step 5.1.5 and for G7 through G10, use step 5.1.6.

WARNING

Do not stand in front of cylinder. Confirm that the M18 pump control knob is in the auto position prior to completing step 5.1.5. Do not stand directly in front of the M18 Override Cylinder when completing step 5.1.5 - Stand to one side or the other.

- 5.1.5 G01 through G5 M18 override cylinder removal.
 - 5.1.5.1 Unscrew and remove hex cap screws (7 - 80) with lock washers (7 - 90) from override cylinder end cap (7 - 70).
 - 5.1.5.2 Remove override cylinder assembly from spring cartridge assembly (5 - 10).
- 5.1.6 G7 through G10 M18 override cylinder removal.

CAUTION

Do not remove hex cap screws (7 - 80) from M18 Override Cylinder at this time. If hex cap screws (7 - 80) are removed at this time it is possible that hydraulic fluid will be dumped inside the spring cartridge.

- 5.1.6.1 Unscrew and remove hex cap screws (7 - 100) with lock washers (7 - 90) from override cylinder end cap (7 - 70).

NOTE:

To identify hex cap screws (7 - 100) from hex cap screws (7 - 80), hex cap screws (7 - 100) will be located to the left and right of SR cartridge top dead center and will then be counted as every other hex cap screw. To verify correct hex cap screws, check the following Table for screw length.

Table 6. Hex Cap Screw Length

| Actuator Model | Item 7 - 80 Length | | Item 7 - 100 Length | |
|----------------|--------------------|------|---------------------|-------|
| | in. | mm | in. | mm |
| G7 | 2 | 50.8 | 2.75 | 69.85 |
| G8 | 3 | 76.2 | 4.5 | 114.3 |
| G10 | 3.5 | 88.9 | 5.0 | 127 |

- 1.1.1.1 Remove override cylinder assembly from spring cartridge assembly (5 - 10).

5.2 M18 Override Cylinder Installation

- 5.2.1 Install O-ring seal (6 - 10) into the O-ring groove in the outboard end of spring cartridge assembly (5 - 10).
- 5.2.2 M18 Hydraulic Override Cylinder installation: For models G01 through G5, use step 5.2.3 and for G7 through G10, use step 5.2.4.
- 5.2.3 G01 through G5 M18 Override Cylinder installation.
- 5.2.3.1 Insert M18 Hydraulic Override Cylinder assembly through spring cartridge outer end.
- 5.2.3.2 Install lock washers (7 - 90) on to hex cap screws (7 - 80).
- 5.2.3.3 Install hex cap screws (7 - 80) with lock washers (7 - 90) through hydraulic override end cap (7 - 70) and into outer end of spring cartridge (5 - 10).
- 5.2.4 G7 through G10 M18 Override Cylinder installation.
- 5.2.4.1 Insert M18 Hydraulic Override Cylinder assembly into spring cartridge outer end.
- 5.2.4.2 Install lock washers (7 - 90) on to eight hex cap screws (7 - 100).
- 5.2.4.3 Install hex cap screws (7 - 100) with lock washers (7 - 90) through hydraulic override end cap (7 - 70) and into outer end of spring cartridge (5 - 10).
- 5.2.5 Torque tighten hex cap screws (7 - 100) and (7 - 80), alternately until a final lubricated torque, as listed in the following Table, has been achieved.

Table 7. M18 Override Cylinder End Cap to SR Cartridge Screw Torque

| Housing Model | Torque ($\pm 5\%$) | | Housing Model | Torque ($\pm 5\%$) | |
|---------------|----------------------|-------|---------------|----------------------|--------|
| | lb-ft | Nm | | lb-ft | Nm |
| G01 | 16 | 21.68 | G5 | 40 | 54.2 |
| G2 | 16 | 21.68 | G7 | 80 | 108.4 |
| G3 | 16 | 21.68 | G8 | 130 | 176.15 |
| G4 | 40 | 54.2 | G10 | 190 | 257.45 |

- 5.2.6 Using pipe dope on threads reinstall all piping between hydraulic override cylinder assembly and the M18 pump.
- 5.2.7 Fluid filling instructions for M18 and M18-S Hydraulic Override Systems:
 - 5.2.7.1 To fluid fill M18 Manual Hydraulic Override System refer to instructions part number VA-DC-000-1879.

5.3 Spring Module Removal

WARNING

Check spring cartridge positioning. The spring cartridge must be checked to verify that the spring(s) are in their extended position before the spring cartridge is removed from the actuator.

NOTE:

1. When the spring module is to be removed it should be removed from the drive module prior to the pneumatic power module removal or disassembly.
 2. Review Section 2.1, General Disassembly before proceeding with spring module disassembly.
 3. The setting of stop screws (1 - 180) should be checked and setting recorded before stop screws are loosened or removed.
-

- 5.3.1 Shut off and exhaust the operating media from both sides of the actuator's power cylinder.
- 5.3.2 The M18 Override Cylinder must be removed prior to spring module removal: Proceed to Section 5.1 and complete all steps 5.1.1 through 5.1.6 and then continue with step 5.3.3.
- 5.3.3 Apply pneumatic pressure to inner end cap (2 - 40) port "A" to compress the spring enough to move the yoke off the stop screw on the spring module side of the drive module.
- 5.3.4 Loosen the stop screw nut (1 - 190) located on the stop screw that is closest to or next to spring module.
- 5.3.5 Unscrew stop screw (1 - 180) that is closest to or next to spring module (unscrew or back out until the load is removed from the stop screw).
- 5.3.6 Remove pneumatic pressure from pressure inlet port of inner end cap (3 - 10).

CAUTION

Use heavy duty support equipment. Due to the weight and size of spring cartridge assembly (5 - 10), heavy duty support equipment will be required when removing spring cartridge assembly from the actuator housing. Refer to Section 6 for spring cartridge module weights.

- 5.3.7** The spring cartridge "pre-load" must be removed before spring cartridge assembly (5 - 10) is removed from housing (1 - 10). Refer to steps 5.3.4 through 5.3.6 for spring cartridge "pre-load" removal.
- 5.3.8** Remove breather assembly (12) from outer end cap (3 - 80) port "B".

CAUTION

Do not exceed maximum pressure. The maximum pressure to be applied in step 5.3.9 is 25 psig.

- 5.3.9** Apply pneumatic pressure, not to exceed the maximum as indicated in the above "CAUTION", to the pressure inlet port "B" of outer end cap (3 - 80) to move the spring cartridge tension rod hex nut out of its cast hex seat.

NOTE:

If pneumatic pressure is not available to apply to the pressure inlet port "B" located in outer end cap (3 - 80) then remove pipe plug (3 - 120) or if equipped with an extended stop (ES) remove the ES. Using a long rod go through the outer end cap pipe plug or ES vacant port hole and push on the piston rod to move the spring cartridge tension rod hex nut out of its cast hex seat.

- 5.3.10** Unscrew the spring cartridge tension rod from the drive module. The tension rod can be rotated for removal by going through the open end of spring cartridge assembly with a square male drive extension.
- 5.3.11** Remove hex cap screws (5 - 20) with lock washers (5 - 30) from housing (1 - 10).
- 5.3.12** Remove spring cartridge assembly (5 - 10) from actuator housing (1 - 10).

WARNING

Do not cut spring cartridge assembly. Under no circumstances should the spring cartridge assembly (5-10) be cut apart, as the spring is pre-loaded, and the spring cartridge is a weld assembly.

5.4 Spring Module Installation

CAUTION

Use heavy duty support equipment. Due to the weight and size of spring module, heavy duty support equipment will be required when installing spring cartridge module to the actuator housing. For the approximate weight of the spring cartridge refer to Section 6.

WARNING

Verify overtravel position. Actuator must be in the appropriate overtravel position (see detail "A" on warning tag attached to spring module access hole cover or to Bettis drawing part number 123650). Confirm overtravel position by observing the guide block (1 - 30) is against the inner wall of housing (1 - 10).

NOTE:

The setting of stop screws (1 - 180) should be checked and setting recorded before stop screws are loosened or removed.

- 5.4.1 On stop screw (1 - 180), that is located on the same side of the housing as spring cartridge (5 - 10), loosen stop screw nut (1 - 190).
- 5.4.2 Unscrew or back out stop screw (1 - 180) to achieve over-travel as illustrated in detail "A" on warning tag attached to spring module cover plate or to Bettis drawing part number 123650.
- 5.4.3 Install O-ring seal (6 - 20) into the O-ring groove in the inboard end of spring cartridge assembly (5 - 10).
- 5.4.4 Using lifting equipment move spring module up to housing (1 - 10) and align spring cartridge tension rod with extension rod assembly (9 - 50).

WARNING

Complete step 5.4.5 to avoid severe injury to personnel or incur major damage to the actuator.

- 5.4.5 Spring cartridge tension rod to rod extension installation as follows:
 - 5.4.5.1 Using a male square drive extension, go through the open end of spring module (5 - 10) and rotate the tension rod nut until initial thread engagement is achieved.

NOTE:

Confirm initial thread engagement of rod extension (9-50) to tension rod.

- 5.4.5.2** After confirming initial thread engagement, rotate tension rod into extension rod assembly (9 - 50) per the following Table:

⚠ WARNING

Rotate tension rod properly. After initial thread engagement the tension rod must be rotated clockwise the minimum number of turns listed in Table 8.

Table 8. Minimum Turns

| Actuator Model | Torque Units | G01 | G2 | G3 | G4 | G5 | G7 | G8 | G10 |
|------------------|--------------|-----|----|----|----|----|----|----|-----|
| Minimum no turns | N/A | N/A | 10 | 10 | 10 | 13 | 14 | 20 | 25 |

⚠ WARNING

Do not cross-thread. When screwing piston rod into extension rod assembly (9 - 50) make certain that the tension rod and extension rod assembly threads do not cross-thread.

- 5.4.6** Torque tighten the spring cartridge tension rod as listed in the following Table:

Table 9. Spring Cartridge Tension Rod Torque

| Housing Model | Torque ($\pm 5\%$) | | Housing Model | Torque ($\pm 5\%$) | |
|---------------|----------------------|-----|---------------|----------------------|-----|
| | lb-ft | Nm | | lb-ft | Nm |
| G01 | 50 | 68 | G5 | 240 | 325 |
| G2 | 90 | 122 | G7 | 240 | 325 |
| G3 | 90 | 122 | G8 | 240 | 325 |
| G4 | 240 | 325 | G10 | 240 | 325 |

- 5.4.7** Install lock washers (5 - 30) onto hex cap screws (5 - 20).
- 5.4.8** Install hex cap screws (5 - 20) with lock washers (5 - 30) through housing (1 - 10) and into spring cartridge assembly (5 - 10) and tighten.
- 5.4.9** Install O-ring seal (6 - 10) into the O-ring groove in the outboard end of spring cartridge assembly (5 - 10).
- 5.4.10** M18 Hydraulic Override Cylinder installation: For models G2 through G5, use step 5.4.11 and for G7 through G10, use step 5.4.12.
- 5.4.11** G2 through G5 M18 Override Cylinder installation.
- 5.4.11.1** Insert M18 Hydraulic Override Cylinder assembly into spring cartridge outer end.
- 5.4.11.2** Install lock washers (7 - 90) on to eight hex cap screws (7 - 80).
- 5.4.11.3** Install eight hex cap screws (7 - 80) with lock washers (7 - 90) through end cap (7 - 70) and into outer end of spring cartridge (5 - 10).

- 5.4.12** G7 through G10 M18 Override Cylinder installation.
- 5.4.12.1** Insert M18 Hydraulic Override Cylinder assembly into spring cartridge outer end.
- 5.4.12.2** Install lock washers (7 - 80) on to eight hex cap screws (7 - 100).
- 5.4.12.3** Install eight hex cap screws (7 - 100) with lock washers (7 - 90) through end cap (7 - 70) and into outer end of spring cartridge (5 - 10).
- 5.4.13** Torque tighten hex cap screws (7 - 100) and (7 - 80), alternately until a final lubricated torque, as listed in the following Table, has been achieved.

Table 10. M18 Override Cylinder End Cap to SR Cartridge Screw Torque

| Housing Model | Torque ($\pm 5\%$) | | Housing Model | Torque ($\pm 5\%$) | |
|---------------|----------------------|-------|---------------|----------------------|--------|
| | lb-ft | Nm | | lb-ft | Nm |
| G01 | 16 | 21.68 | G5 | 40 | 54.2 |
| G2 | 16 | 21.68 | G7 | 80 | 108.4 |
| G3 | 16 | 21.68 | G8 | 130 | 176.15 |
| G4 | 40 | 54.2 | G10 | 190 | 257.45 |

- 5.4.14** Using pipe dope on threads reinstall all piping between hydraulic override cylinder assembly and the M18 pump.
- 5.4.15** Fluid filling instructions for M18 and M18-S Hydraulic Override Systems:
- 5.4.15.1** To fluid fill M18 Manual Hydraulic Override System refer to instructions part number 126858.
- 5.4.15.2** To fluid fill M18-S Manual Hydraulic Override System refer to instructions part number 121960.
- 5.4.16** If removed install stop screw nuts (1 - 190) onto stop screws (1 - 180).
- 5.4.17** If removed install O-ring (2 - 90) onto stop screws (1 - 180).
- 5.4.18** If removed install two stop screws (1 - 180) into two stop screw holes on the front of housing (1 - 10).
- 5.4.19** Adjust both stop screws (1 - 180) back to settings recorded earlier in Section 5.
- 5.4.20** Tighten both stop screw nuts (1 - 190) securely.

5.5 Pneumatic Power Module Removal

CAUTION

Use heavy duty support equipment. Due to the weight and size of power module, heavy duty support equipment will be required when removing power module from the actuator housing. Refer to Section 6 for Pneumatic Power Module Weights.

- 5.5.1** Remove pipe plug (3 - 120) from outer end cap (3 - 80).
- 5.5.2** Remove hex cap screws (3 - 100) with lock washers (3 - 110) from housing (1 - 10).
- 5.5.3** Using a male square drive extension, go through outer end cap (3 - 80) and unscrew piston rod (3 - 40) from extension rod assembly (1 - 50).

NOTE:

When removing power module from housing (1 - 10) be careful not to lose O-ring seal (4 - 90).

5.5.4 Remove power module from actuator housing (1-10).

5.6 Pneumatic Power Module Installation

NOTE:

Reinstall the power module onto the opposite side of housing (1 - 10) as it was previously located.

5.6.1 Check to verify that O-ring seal (4 - 90) is properly seated in its seal groove located on the housing side of inner end cap (3 - 10).

NOTE:

G2 and G3 models confirm that the two inboard hex nuts (3 - 90) flats are aligned to fit into the slot located in the end of housing (1 - 10).

5.6.2 Using lifting equipment move the power module up to housing (1 - 10) and align piston rod (3 - 40) with extension rod assembly (1 - 50).

5.6.3 Using a male square drive extension, go through outer end cap (3 - 80) and screw piston rod (3 - 40) into extension rod assembly (1 - 50).

CAUTION

Do not cross-thread piston rods. When screwing piston rod into extension rod assembly (1 - 50) make certain that the piston rod and extension rod assembly threads do not cross-thread.

5.6.4 Torque tighten piston rod (3 - 40) as follows:

5.6.4.1 G2 and G3 torque to 90 lb-ft lubricated.

5.6.4.2 G4 and G10 torque to 240 lb-ft lubricated.

5.6.5 Install lock washers (3 - 110) onto hex cap screws (3 - 100).

5.6.6 Install and tighten hex cap screws (3 - 100) with lock washers (3 - 110) through housing (1 - 10) and screw into inner end cap (3 - 10).

5.6.7 Using pipe dope, install pipe plug (3 - 120) into outer end cap (3 - 80).

5.7 Power Swivel Removal

- 5.7.1** Push the guide block to the side of housing (1 - 10) that will expose the extension rod assembly (1 - 50).

NOTE:

The guide block can be moved by inserting a long nonmetallic rod through the hole where the blind end cap was removed and pushing on the guide block.

- 5.7.2** Refer to assembly drawing sheet 2 Detail "B". Use Bettis tool part number as listed in Table in Section 1, step 1.5.2 to remove retainer nut assembly (1 - 60) from the guide block (1 - 30).

⚠ CAUTION

Carefully handle spherical washers. When removing rod extension assembly from guide block be careful not to drop one of the spherical washers inside the housing.

- 5.7.3** Remove rod extension assembly (1 - 50) from guide block (1 - 30).

NOTE:

One spherical washer (1 - 40) will be removed from guide block (1 - 30) when extension rod assembly is removed.

- 5.7.4** Remove the remaining spherical washer (1 - 40) from guide block (1 - 30).

5.8 Power Swivel Module Installation

⚠ WARNING

Verify overtravel position. The actuator must be in the appropriate overtravel position. Confirm overtravel position by observing the guide block (1 - 30) is against the inner wall of housing (1 - 10).

- 5.8.1** Push the guide block to the required side of the housing (1 - 10).

NOTE:

The guide block can be moved by inserting a long rod through either end of the housing and pushing on the guide block.

- 5.8.2** Lubricate two spherical washers (1 - 40), and one extension rod assembly (1 - 50).
- 5.8.3** Install one spherical washer (1 - 40) into the side of guide block (1 - 30).

NOTE:

The spherical side of washer (1 - 40) will be facing to the outside of guide block (1 - 30).

- 5.8.4** Install second spherical washer (1 - 40) over threaded end of extension rod assembly (1 - 50).

NOTE:

The spherical side of the washer will go on the extension rod assembly facing the head of the extension rod assembly.

- 5.8.5** Install extension rod assembly (1 - 50) into right of guide block (1 - 30) and up against the first spherical washer (1 - 40).
- 5.8.6** Install extension retainer nut assembly (1 - 60) over extension rod assembly (1 - 50) and screw into guide block (1 - 30).
- 5.8.7** Tighten extension retainer nut assembly (1 - 60) until extension rod assembly (1 - 50) cannot move. Back off the extension retainer nut assembly (1 - 60) just enough to allow for extension rod assembly (1 - 50) to move freely.

Section 6: Actuator Support Information

6.1 M18 Hydraulic Override System Fluid Volume

Table 11. M18 Hydraulic Override System Fluid Volume

| Actuator Size | | G01 | G2 | G3 | G4 | G5 | G7 | G8 | G10 |
|----------------------------------|--------|-----|-----|-----|-----|------|-----|------|------|
| Approximate Volume Fluid for M18 | Quarts | 1.6 | 1.8 | 2.0 | 3.6 | 10.2 | 9.7 | 15.9 | 27.0 |
| | Liters | 1.8 | 1.7 | 1.9 | 3.4 | 9.6 | 9.1 | 15.1 | 25.6 |

6.2 Module Weights by Item Number and Actuator Housing Size

Table 12. Module Weight by Item Number and Actuator Housing Size

| Item No. | | G01 WT. | G2 WT. | G3 WT. | G4 WT. | G5 WT. | G7 WT. | G8 WT. | G10 WT. | Module Description |
|----------|----|---------|--------|--------|--------|--------|--------|--------|---------|--------------------|
| 1 | lb | 83 | 110 | 162 | 280 | 545 | 1,025 | 1,495 | 2,550 | Drive Module |
| | kg | 38 | 50 | 73 | 127 | 247 | 465 | 678 | 1,157 | |
| 3 | lb | 69 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | 8" Dia. Power |
| | kg | 31 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | |
| 3 | lb | 68 | 80 | N/A | N/A | N/A | N/A | N/A | N/A | 9" Dia. Power |
| | kg | 30.5 | 36 | N/A | N/A | N/A | N/A | N/A | N/A | |
| 3 | lb | 75 | 73.5 | 88 | N/A | N/A | N/A | N/A | N/A | 10" Dia. Power |
| | kg | 34 | 33 | 40 | N/A | N/A | N/A | N/A | N/A | |
| 3 | lb | 86 | 86 | 104 | 130 | N/A | N/A | N/A | N/A | 12" Dia. Power |
| | kg | 39 | 39 | 47 | 59 | N/A | N/A | N/A | N/A | |
| 3 | lb | 96 | 96 | 114 | 145 | N/A | N/A | N/A | N/A | 14" Dia. Power |
| | kg | 44 | 44 | 51 | 66 | N/A | N/A | N/A | N/A | |
| 3 | lb | N/A | 135 | 145 | 168 | 295 | N/A | N/A | N/A | 16" Dia. Power |
| | kg | N/A | 61 | 66 | 76 | 134 | N/A | N/A | N/A | |
| 3 | lb | N/A | N/A | 235 | 260 | 305 | 585 | N/A | N/A | 20" Dia. Power |
| | kg | N/A | N/A | 107 | 118 | 138 | 265 | N/A | N/A | |
| 3 | lb | N/A | N/A | N/A | 340 | 410 | 735 | 911 | N/A | 24" Dia. Power |
| | kg | N/A | N/A | N/A | 154 | 186 | 334 | 413 | N/A | |
| 3 | lb | N/A | N/A | N/A | 505 | 590 | 810 | 1,225 | 1,120 | 28" Dia. Power |
| | kg | N/A | N/A | N/A | 229 | 268 | 367 | 556 | 508 | |
| 3 | lb | N/A | N/A | N/A | N/A | 977 | 1,100 | 1,260 | 1,440 | 32" Dia. Power |
| | kg | N/A | N/A | N/A | N/A | 443 | 499 | 572 | 653 | |
| 3 | lb | N/A | N/A | N/A | N/A | 1,243 | 1,400 | 1,525 | 1,755 | 36" Dia. Power |
| | kg | N/A | N/A | N/A | N/A | 564 | 653 | 692 | 796 | |
| 3 | lb | N/A | N/A | N/A | N/A | N/A | N/A | 1,975 | 2,205 | 40" Dia. Power |
| | kg | N/A | N/A | N/A | N/A | N/A | N/A | 896 | 1,000 | |
| 3 | lb | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A | 44" Dia. Power |
| | kg | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A | |

| Item No. | | G01 WT. | G2 WT. | G3 WT. | G4 WT. | G5 WT. | G7 WT. | G8 WT. | G10 WT. | Module Description |
|----------|----|---------|--------|--------|--------|--------|--------|--------|---------|--------------------------|
| 3 | lb | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A | 48" Dia. Power |
| | kg | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A | |
| 3 | lb | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A | 52" Dia. Power |
| | kg | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A | |
| 5 | lb | 160 | 225 | 320 | 564 | 975 | 2,740 | 3,545 | 4,975 | SR1 Spring |
| | kg | 73 | 102 | 145 | 256 | 442 | 1,243 | 1,608 | 2,257 | |
| 5 | lb | 158 | 215 | 310 | 549 | 980 | 2,630 | 2,345 | 4,515 | SR2 Spring |
| | kg | 72 | 98 | 141 | 249 | 445 | 1,193 | 1,064 | 2,048 | |
| 5 | lb | 153 | 215 | 295 | 534 | 925 | 2,410 | 3,085 | 4,095 | SR3 Spring |
| | kg | 153 | 98 | 295 | 534 | 925 | 2,410 | 3,085 | 4,095 | |
| 5 | lb | 144 | 200 | 280 | 474 | 860 | 2,210 | N/A | 3,735 | SR4 Spring |
| | kg | 65 | 91 | 127 | 215 | 390 | 1,002 | N/A | 1,694 | |
| 5 | lb | N/A | 200 | N/A | N/A | N/A | N/A | N/A | N/A | SRA5 Spring |
| | kg | N/A | 91 | N/A | N/A | N/A | N/A | N/A | N/A | |
| 5 | lb | N/A | 180 | N/A | N/A | N/A | N/A | N/A | N/A | SRA6 Spring |
| | kg | N/A | 82 | N/A | N/A | N/A | N/A | N/A | N/A | |
| 7 | lb | 18 | 34 | 47 | 82 | 100 | 181 | 270 | 530 | M18 SR Override Cylinder |
| | kg | 8.2 | 15.3 | 21.2 | 36.9 | 45 | 81.45 | 1,275 | 239 | |
| 2 | lb | 35 | 35 | 35 | 45 | 50 | 35 | 45 | 50 | M18 SR Pump / Reservoir |
| | kg | 14.5 | 14.5 | 14.5 | 20.4 | 22.7 | 14.5 | 20.4 | 22.7 | |

6.3 G01 Tool Style and Wrench Size

Table 13. G01 Tool Style and Wrench Size

| Item No. | Wrench Size | Item Qty. | Location or Description | Recommended Tool Style |
|----------|-------------|-----------|-------------------------|------------------------|
| 1 - 110 | 9/16" | 4 | Hex Cap Screws | Socket |
| 1 - 160 | 1/2" | 4 | Hex Cap Screws | Socket |
| 1 - 180 | 3/8" sq. | 2 | Stop Screws | Open End or Adjustable |
| 1 - 190 | 1 - 15/16" | 2 | Hex Jam Nuts | Open End or Adjustable |
| 3 - 20 | 3/8" | 2 | Tie Bar (flats) | Open End or Adjustable |
| 3 - 40 | 3/8" sq. | 1 | Piston Rod | Male Drive |
| 3 - 90 | 1 - 1/8" | 2 | Standard Hex Nuts | Socket |
| 3 - 100 | 9/16" | 4 | Hex Cap Screws | Socket |
| 3 - 120 | 5/8" sq. | 1 | Pipe Plug | Open End or Adjustable |
| 3 - 130 | 3/16" | 2 | Socket Cap Screws | Allen |
| 5 - 20 | 9/16" | 4 | Hex Cap Screws | Socket |
| 7 - 80 | 9/16" | 4 | Hex Cap Screws | Socket |
| 7 - 110 | 1/8" sq. | 1 | Square Head Pipe Plug | Open End or Adjustable |
| 7 - 120 | 9/16" sq. | 1 | Square Head Pipe Plug | Square Head Pipe Plug |
| 12 | 1" | 1 | Breather Assembly | Socket |
| 13 | 3/4" | 2 | Vent Check Assembly | Open End |
| - | 3/8" sq. | 1 | Tension rod | Male Drive |

6.4 G2 Tool Style and Wrench Size

Table 14. G2 Tool Style and Wrench Size

| Item No. | Wrench Size | Item Qty. | Location or Description | Recommended Tool Style |
|----------|-------------|-----------|-------------------------|------------------------|
| 1 - 110 | 9/16" | 6 | Hex Cap Screws | Socket |
| 1 - 160 | 9/16" | 4 | Hex Cap Screws | Socket |
| 1 - 180 | 3/8" sq. | 2 | Stop Screws | Open End or Adjustable |
| 1 - 190 | 1 - 1/8" | 2 | Hex Jam Nuts | Open End or Adjustable |
| 3 - 20 | 3/8" | 2 | Tie Bar (flats) | Open End or Adjustable |
| 3 - 40 | 3/8" sq. | 1 | Piston Rod | Male Drive |
| 3 - 90 | 1 - 1/8" | 4 | Standard Hex Nuts | Socket |
| 3 - 100 | 9/16" | 4 | Hex Cap Screws | Socket |
| 3 - 120 | 5/8" sq. | 1 | Pipe Plug | Open End or Adjustable |
| 3 - 130 | 3/16" | 2 | Socket Cap Screws | Allen |
| 5 - 20 | 9/16" | 6 | Hex Cap Screws | Socket |
| 7 - 80 | 9/16" | 4 | Hex Cap Screws | Socket |
| 7 - 110 | 1/8" sq. | 1 | Square Head Pipe Plug | Open End or Adjustable |
| 7 - 120 | 1/2" sq. | 1 | Square Head Pipe Plug | Open End or Adjustable |
| 12 | 1" | 1 | Breather Assembly | Open End |
| 13 | 3/4" | 2 | Vent Check Assembly | Open End |
| - | 3/8" sq. | 1 | Tension rod | Male Drive |

6.5 G3 Tool Style and Wrench Size

Table 15. G3 Tool Style and Wrench Size

| Item No. | Wrench Size | Item Qty. | Location or Description | Recommended Tool Style |
|----------|-------------|-----------|-------------------------|------------------------|
| 1 - 110 | 9/16" | 8 | Hex Cap Screws | Socket |
| 1 - 160 | 9/16" | 4 | Hex Cap Screws | Socket |
| 1 - 180 | 1/2" sq. | 2 | Stop Screws | Open End or Adjustable |
| 1 - 190 | 1 - 5/16" | 2 | Hex Jam Nuts | Open End or Adjustable |
| 3 - 20 | 1/2" | 2 | Tie Bar (flats) | Open End or Adjustable |
| 3 - 40 | 3/8" sq. | 1 | Piston Rod | Male Drive |
| 3 - 90 | 1 - 5/16" | 4 | Standard Hex Nuts | Socket |
| 3 - 100 | 9/16" | 6 | Hex Cap Screws | Socket |
| 3 - 120 | 5/8" sq. | 1 | Pipe Plug | Open End or Adjustable |
| 3 - 130 | 3/16" | 2 | Socket Cap Screws | Allen |
| 5 - 20 | 9/16" | 6 | Hex Cap Screws | Socket |
| 7 - 80 | 9/16" | 6 | Hex Cap Screws | Socket |
| 7 - 110 | 1/8" sq. | 1 | Square Head Pipe Plug | Open End or Adjustable |
| 7 - 120 | 1/2" sq. | 1 | Square Head Pipe Plug | Open End or Adjustable |
| 12 | 1" | 1 | Breather Assembly | Open End |
| 13 | 3/4" | 2 | Vent Check Assembly | Open End |
| - | 3/8" sq. | 1 | Tension rod | Male Drive |

6.6 G4 Tool Style and Wrench Size

Table 16. G4 Tool Style and Wrench Size

| Item No. | Wrench Size | Item Qty. | Location or Description | Recommended Tool Style |
|----------|-------------|-----------|-------------------------|------------------------|
| 1 - 110 | 9/16" | 8 | Hex Cap Screws | Socket |
| 1 - 160 | 9/16" | 4 | Hex Cap Screws | Socket |
| 1 - 180 | 3/4" sq. | 2 | Stop Screws | Open End or Adjustable |
| 1 - 190 | 1 - 13/16" | 2 | Hex Jam Nuts | Open End or Adjustable |
| 3 - 20 | 5/8" | 2 | Tie Bar (flats) | Open End or Adjustable |
| 3 - 40 | 1/2" sq. | 1 | Piston Rod | Male Drive |
| 3 - 90 | 1 - 5/8" | 2 | Standard Hex Nuts | Socket |
| 3 - 100 | 3/4" | 6 | Hex Cap Screws | Socket |
| 3 - 120 | 5/8" sq. | 1 | Pipe Plug | Open End or Adjustable |
| 3 - 130 | 3/16" | 2 | Socket Cap Screws | Allen |
| 5 - 20 | 3/4" | 6 | Hex Cap Screws | Socket |
| 7 - 80 | 3/4" | 6 | Hex Cap Screws | Socket |
| 7 - 110 | 1/8" sq. | 1 | Square Head Pipe Plug | Open End or Adjustable |
| 7 - 120 | 1/2" sq. | 1 | Square Head Pipe Plug | Open End or Adjustable |
| 12 | 1" | 1 | Breather Assembly | Open End |
| 13 | 3/4" | 2 | Vent Check Assembly | Open End |
| - | 3/4" | 1 | Tension rod | Male Drive |

6.7 G5 Tool Style and Wrench Size

Table 17. G5 Tool Style and Wrench Size

| Item No. | Wrench Size | Item Qty. | Location or Description | Recommended Tool Style |
|----------|--------------|-----------|-------------------------|------------------------|
| 1 - 110 | 3/4" | 8 | Hex Cap Screws | Socket |
| 1 - 120 | 3/4" | 4 | Hex Cap Screws | Socket |
| 1 - 160 | 9/16" | 6 | Hex Cap Screws | Socket |
| 1 - 180 | 7/8" sq. | 2 | Stop Screws | Open End or Adjustable |
| 1 - 190 | 2 - 3/8" | 2 | Heavy Hex Jam Nuts | Open End or Adjustable |
| 3 - 20 | 1/2" sq. | 2 | Tie Bar (flats) | Open End or Adjustable |
| 3 - 40 | 1/2" sq. | 1 | Piston Rod | Male Drive |
| 3 - 90 | 2" | 2 | Standard Hex Nuts | Socket |
| 3 - 100 | 3/4" | 8 | Hex Cap Screws | Socket |
| 3 - 120 | 1 - 1/8" sq. | 1 | Pipe Plug | Open End or Adjustable |
| 3 - 130 | 3/16" | 2 | Socket Cap Screws | Allen |
| 5 - 20 | 3/4" | 8 | Hex Cap Screws | Socket |
| 7 - 80 | 3/4" | 8 | Hex Cap Screws | Socket |
| 7 - 110 | 1/8" sq. | 1 | Square Head Pipe Plug | Open End or Adjustable |
| 7 - 120 | 1/2" sq. | 1 | Square Head Pipe Plug | Open End or Adjustable |
| 12 | 1" | 1 | Breather Assembly | Open End |
| 13 | 3/4" | 2 | Vent Check Assembly | Open End |
| - | 3/4" | 1 | Tension rod | Male Drive |

6.8 G7 Tool Style and Wrench Size

Table 18. G7 Tool Style and Wrench Size

| Item No. | Wrench Size | Item Qty. | Location or Description | Recommended Tool Style |
|----------|--------------|-----------|-----------------------------|------------------------|
| 1 - 110 | 3/4" | 8 | Hex Cap Screws | Socket |
| 1 - 120 | 3/4" | 4 | Hex Cap Screws | Socket |
| 1 - 160 | 9/16" | 8 | Hex Cap Screws | Socket |
| 1 - 180 | 1" | 2 | Stop Screws | Open End or Adjustable |
| 3 - 20 | 3/4" sq. | 2 | Tie Bar (female square) | Open End or Adjustable |
| 3 - 40 | 3/4" sq. | 1 | Piston Rod | Male Drive |
| 3 - 90 | 2 - 3/8" | 2 | Standard Hex Nuts | Socket |
| 3 - 100 | 15/16" | 8 | Hex Cap Screws | Socket |
| 3 - 120 | 1 - 1/8" sq. | 1 | Pipe Plug | Open End or Adjustable |
| 3 - 130 | 3/16" | 2 | Socket Cap Screws | Allen |
| 5 - 20 | 15/16" | 8 | Hex Cap Screws | Socket |
| 7 - 80 | 15/16" | 8 | Hex Cap Screws | Socket |
| 7 - 100 | 15/16" | 8 | Hex Cap Screws | Socket |
| 7 - 110 | 9/16" | 1 | Flush Socket Head Pipe Plug | Allen |
| 7 - 130 | 9/32" sq. | 1 | Square Head Pipe Plug | Open End or Adjustable |
| 12 | 1" | 1 | Breather Assembly | Open End |
| 13 | 3/4" | 2 | Vent Check Assembly | Open End |
| - | 3/4" | 2 | Tension rod | Male Drive |

6.9 G8 Tool Style and Wrench Size

Table 19. G8 Tool Style and Wrench Size

| Item No. | Wrench Size | Item Qty. | Location or Description | Recommended Tool Style |
|----------|---------------|-----------|-----------------------------|------------------------|
| 1 - 110 | 3/4" | 12 | Hex Cap Screws | Socket |
| 1 - 120 | 3/4" | 4 | Hex Cap Screws | Socket |
| 1 - 160 | 9/16" | 8 | Hex Cap Screws | Socket |
| 1 - 180 | 1 - 1/4" | 2 | Stop Screws | Open End or Adjustable |
| 3 - 20 | 3/4" sq. | 2 | Tie Bar (female square) | Open End or Adjustable |
| 3 - 40 | 3/4" sq. | 1 | Piston Rod | Male Drive |
| 3 - 90 | 2 - 3/4" | 2 | Heavy Hex Nuts | Socket |
| 3 - 100 | 1 - 1/8" | 8 | Hex Cap Screws | Socket |
| 3 - 120 | 1 - 5/16" sq. | 1 | Pipe Plug | Open End or Adjustable |
| 3 - 130 | 3/16" | 2 | Socket Cap Screws | Allen |
| 5 - 20 | 1 - 1/8" | 8 | Hex Cap Screws | Socket |
| 7 - 80 | 1 - 1/8" | 8 | Hex Cap Screws | Socket |
| 7 - 100 | 1 - 1/8" | 8 | Hex Cap Screws | Socket |
| 7 - 110 | 9/16" | 1 | Flush Socket Head Pipe Plug | Allen |
| 7 - 130 | 9/32" sq. | 1 | Square Head Pipe Plug | Open End or Adjustable |
| 12 | 1" | 1 | Breather Assembly | Open End |
| 13 | 3/4" | 2 | Vent Check Assembly | Open End |
| - | 3/4" | 1 | Tension rod | Male Drive |

6.10 G10 Tool Style and Wrench Size

Table 20. G10 Tool Style and Wrench Size

| Item No. | Wrench Size | Item Qty. | Location or Description | Recommended Tool Style |
|----------|---------------|-----------|-----------------------------|------------------------|
| 1 - 110 | 3/4" | 16 | Hex Cap Screws | Socket |
| 1 - 120 | 3/4" | 4 | Hex Cap Screws | Socket |
| 1 - 160 | 9/16" | 8 | Hex Cap Screws | Socket |
| 1 - 180 | 1 - 1/2" | 2 | Stop Screws | Open End or Adjustable |
| 3 - 20 | 3/4" sq. | 2 | Tie Bar (female square) | Open End or Adjustable |
| 3 - 40 | 3/4" sq. | 1 | Piston Rod | Male Drive |
| 3 - 90 | 3 - 1/2" | 2 | Heavy Hex Nuts | Socket |
| 3 - 100 | 1 - 5/16" | 8 | Hex Cap Screws | Socket |
| 3 - 120 | 1 - 5/16" sq. | 1 | Pipe Plug | Open End or Adjustable |
| 3 - 130 | 3/16" | 2 | Socket Cap Screws | Allen |
| 5 - 20 | 1 - 1/8" | 8 | Hex Cap Screws | Socket |
| 7 - 80 | 1 - 5/16" | 8 | Hex Cap Screws | Socket |
| 7 - 100 | 1 - 5/16" | 8 | Hex Cap Screws | Socket |
| 7 - 110 | 9/16" | 1 | Flush Socket Head Pipe Plug | Allen |
| 7 - 130 | 9/32" sq. | 1 | Square Head Pipe Plug | Open End or Adjustable |
| 12 | 1" | 1 | Breather Assembly | Open End |
| 13 | 3/4" | 2 | Vent Check Assembly | Open End |
| - | 3/4" | 1 | Tension rod | Male Drive |

6.11 M18 Tool Style and Wrench Size

Table 21. M18 Tool Style and Wrench Size

| Item No. | Wrench Size | Item Qty. | Location or Description | Recommended Tool Style |
|---------------|-------------|-----------|-------------------------|------------------------|
| 10 - 50 | 3/4" | 1 | Acorn Nut | Socket |
| 10 - 80 | 3/8" | 2 | Pipe Plug | Socket |
| 10 - 90 | 3/4" | 1 | Breather | Socket |
| 10 - 110 | 3/4" | 1 | Pipe Plug | Socket |
| 20 - 10 - 27 | 11/16" | 1 | Check Valve | Socket |
| 20 - 10 - 30 | 13/16" | 1 | Relief Valve | Open End or Adjustable |
| 20 - 10 - 40 | 11/16" | 2 | Check Valve | Socket |
| 20 - 10 - 180 | 1/2" | 3 | Socket Cap Screws | Allen |
| 20 - 10 - 190 | 5/16" | 6 | Socket Cap Screws | Allen |
| 20 - 10 - 210 | 3/16" | 17 | Socket Cap Screws | Allen |
| 20 - 10 - 240 | 3/16" | 1 | Socket Cap Screws | Allen |
| 20 - 10 - 260 | 7/8" | 2 | Orifice Check Valve | Socket |
| 20 - 10 - 400 | 1/2" | 1 | Square Head Pipe Plug | Open End or Adjustable |
| 25 - 240 | 3/16" | 4 | Socket Cap Screws | Allen |
| 25 - 410 | 5/32" | 2 | Socket Cap Screws | Allen |
| 25 - 430 | 3/32" | 1 | Socket Cap Screws | Allen |
| 30 - 20 | 7/16" | 4 | Hex Cap Screws | Socket |
| 30 - 40 | 3/16" | 2 | Socket Cap Screws | Allen |

| Item No. | Wrench Size | Item Qty. | Location or Description | Recommended Tool Style |
|----------|-------------|-----------|-------------------------|------------------------|
| 30-100 | 7/32" | 4 | Socket Cap Screws | Allen |
| 30-110 | 3/8" | 4 | Socket Cap Screws | Allen |
| 40 | 11/16"/5/8" | 1 | Male Elbow | Open End or Adjustable |
| 60 | 11/16"/5/8" | 1 | Male Connector | Open End or Adjustable |
| 80-10 | 3/16" | 2 | Socket Cap Screws | Allen |
| 80-20 | 1/2" | 1 | Elbow | Open End or Adjustable |
| 80-60 | 5/8" | 1 | Bulkhead Adapter | Open End or Adjustable |
| 80-70 | 1/2" | 1 | Hex Cap Nut | Open End or Adjustable |
| 80-120 | 3/8" | 1 | Pivot Pin | Open End or Adjustable |
| 90-30 | 11/16" | 1 | Check Valve | Socket |
| 90-40 | 11/16" | 1 | Male Tube Adapter | Open End or Adjustable |
| 90-50 | 11/16" | 1 | Male Connector | Open End or Adjustable |
| 90-60 | 11/16" | 1 | Check Valve | Socket |

Section 7: Troubleshooting

7.1 Fault Insertion

In the unlikely event of a fault developing, the following Fault Location Table is provided to assist the service engineer to perform troubleshooting. This Table is designed to cover as wide a range of Emerson Bettis actuators as possible. Reference to equipment not supplied should be ignored.

Table 22. Fault Location Table

| Symptom | Potential Causes | Remedy |
|-------------------------|---|--|
| Erratic movement | Irregular supply of operating medium | Check operating medium for consistent supply pressure and correct as necessary. |
| | Inadequate lubrication | Dismantle, relubricate and reassemble. |
| | Worn parts | Dismantle, visually inspect for significant wear. Actuator replacement may be required. |
| | Defective valve | Consult the valve OEM's documentation. |
| Short stroke | Incorrectly set stops (valve and /or actuator) | Check the position of the travel stops and readjust as necessary. |
| | Hardened grease | Dismantle, remove any hard grease, relubricate and reassemble. |
| | Debris left in the cylinder or housing during maintenance | Disassemble cylinder assembly to remove debris. Reassemble cylinder assembly as necessary. |
| | Defective valve | Consult the valve manufacturer's documentation. |
| Apparent lack of torque | Inadequate supply pressure | Ensure supply pressure is above the minimum operating pressure of the actuator and that output torque produced at supply pressure exceeds valve torque demand. |
| | Incorrect speed control settings | Adjust speed controls to increase flow. |
| | Exhaust port blocked | Remove and clean the exhaust port silencers and replace. |
| | Pipe work blocked, crushed or leaking | Examine the pipe work for blockages, crushed pipe or leakage. Clear or replace as necessary. |
| | Defective controls | Examine the controls, refurbish or renew as necessary. Refer to component manufacturer's documentation. |
| | Defective piston seal | Dismantle the cylinder assembly, remove the defective piston seal. Fit new seal and reassemble. |
| | Defective rod seal | Dismantle the cylinder assembly, remove the defective rod seal. Fit new seal and reassemble. |
| | Defective housing seal | Dismantle the housing assembly, remove the defective seal. Fit new seal and reassemble. |
| | High valve torque or valve seized | Consult the valve OEM documentation. |

7.2 Operational Test

7.2.1 Full Stroke Test

The “Full Stroke Test” (“On-line”) must be performed to satisfy the PFD_{AVG} (average probability of failure on demand) value. The full stroke test frequencies will be defined by the final installer to achieve the defined SIL level.

7.2.1.1 Procedure

7.2.1.1.1 Stroke the actuator/valve assembly two complete open/close cycles with complete closing of the valve.

7.2.1.1.2 Verify the open/close cycles functioned correctly (e.g. check locally, or automatically via Logic solver, the correct movement of the actuator/valve).

Upon successful completion of the above described Full Stroke Test procedure, the “Test Coverage” can be considered 99%.

7.2.2 Partial Stroke Test (when requested)

The “Partial Stroke Test” (“On-line”) can be performed to improve the PFD_{AVG} value and to satisfy PFD_{AVG} (average probability of failure on demand) value. A typical partial stroke value is 15% of the stroke and the recommended test interval is about everyone to three months.

7.2.2.1 Procedure

7.2.2.1.1 Operate the actuator/valve assembly for No° 1 open/close cycles 15% of the stroke.

7.2.2.1.2 Verify the partial stroke test functioned correctly (e.g. check locally, or automatically via Logic solver, or via the PST system the correct movement of the actuator/valve was 15% of the stroke).

NOTE:

The above test is only applicable on systems equipped with a partial stroke feature.

Section 8: Removal and Decommissioning

8.1 Removal and Decommissioning

WARNING

Follow proper procedure. Always follow safe work practices remove and disassemble G-Series actuator.

The below basic procedure should not supersede or replace any customer's plant safety or work procedures. If a conflict arises between this procedure and the customer's procedures, the differences should be resolved in writing between an authorized customer's representative and an authorized Emerson / Bettis representative.

CAUTION

Isolate and power off actuator. Make sure actuator is isolated before removing from valve. Turn OFF the power medium and bleed off all pressure first, including storage tank (if present). Next, bleed off pilot pressure, disconnect pneumatic pressure supply, pilot tubing and electrical wiring (if equipped).

Before starting the disassembly, a large area should be created around the actuator so to allow any kind of movement.

Separate the parts composing the actuator according to their nature (ex. metallic, and plastic materials, fluids etc.) and send them to differentiate waste collection sites, as provided for by the laws and provisions in force.

8.1.1 Drain tanks and remove tubing from actuator. Remove accessories (if equipped) and controls from actuator.

8.1.2 Remove all equipment mounted on top of actuator (limit switches, end of stroke valve, and relevant pneumatic/electric connection, etc.)

8.1.3 Remove mounting bolts and actuator is ready to be removed from valve.

For complete actuator tear down, refer to Section 2 of the manual.

List of Tables


| | | |
|----------|---|----|
| Table 1 | G-Series Models | 3 |
| Table 2 | Housing Cover Screw Quantity and Torque..... | 20 |
| Table 3 | Piston Rod Torque Information | 22 |
| Table 4 | Tie Bar Nuts..... | 24 |
| Table 5 | G2 Tie Bar Nuts | 26 |
| Table 6 | Hex Cap Screw Length..... | 33 |
| Table 7 | M18 Override Cylinder End Cap to SR Cartridge Screw Torque..... | 33 |
| Table 8 | Minimum Turns..... | 37 |
| Table 9 | Spring Cartridge Tension Rod Torque | 37 |
| Table 10 | M18 Override Cylinder End Cap to SR Cartridge Screw Torque..... | 38 |
| Table 11 | M18 Hydraulic Override System Fluid Volume | 42 |
| Table 12 | Module Weight by Item Number and Actuator Housing Size | 42 |
| Table 13 | G01 Tool Style and Wrench Size | 43 |
| Table 14 | G2 Tool Style and Wrench Size..... | 44 |
| Table 15 | G3 Tool Style and Wrench Size..... | 44 |
| Table 16 | G4 Tool Style and Wrench Size..... | 45 |
| Table 17 | G5 Tool Style and Wrench Size..... | 45 |
| Table 18 | G7 Tool Style and Wrench Size..... | 46 |
| Table 19 | G8 Tool Style and Wrench Size..... | 46 |
| Table 20 | G10 Tool Style and Wrench Size | 47 |
| Table 21 | M18 Tool Style and Wrench Size | 47 |
| Table 22 | Fault Location Table..... | 49 |
| Table 23 | Revision Overview | 52 |

A.1 Part No. 121410, G1/2/3/4/5-SRX-H Pneumatic Assembly Drawing, Sheet 1 of 2

[illegible]

A.2 Part No. 121410, G1/2/3/4/5-SRX-H Pneumatic Assembly Drawing, Sheet 2 of 2

Figure A-2

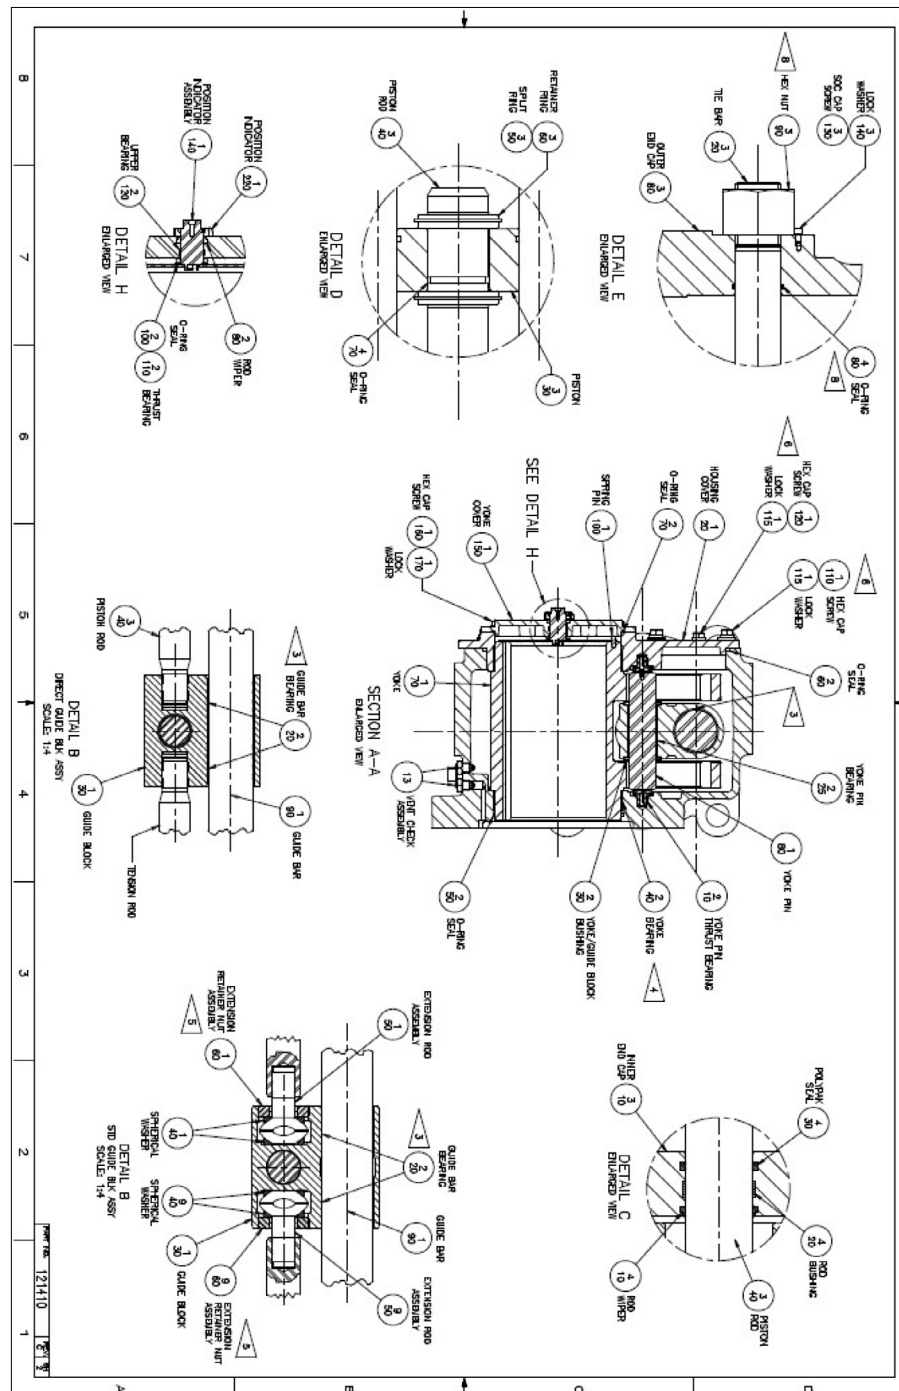

A.3 Part No. 121411, G7/8/10/13-SRX-H Pneumatic Assembly Drawing, Sheet 1 of 2

Figure A-3


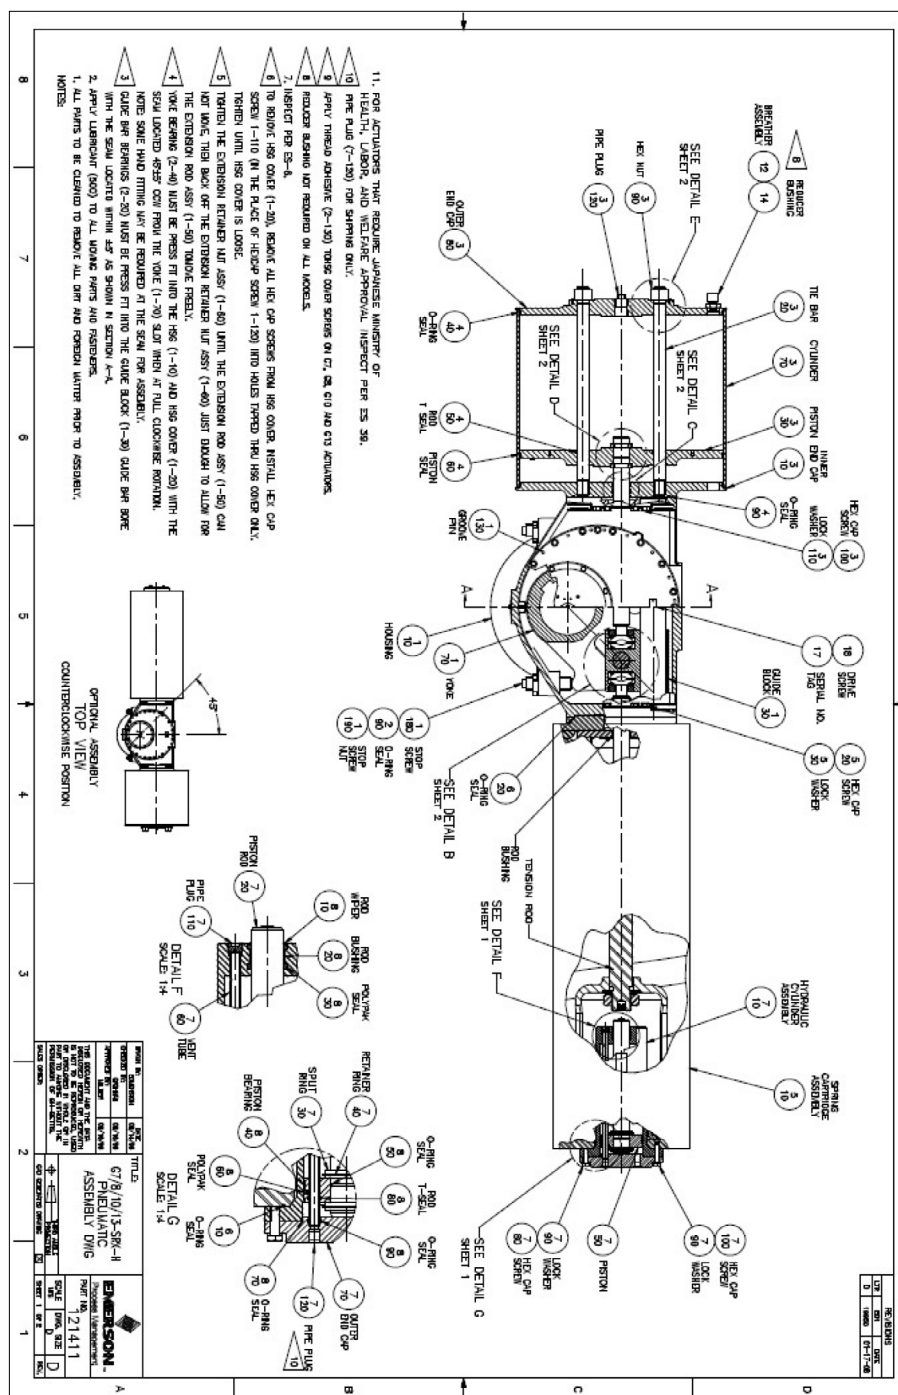


Figure A-4

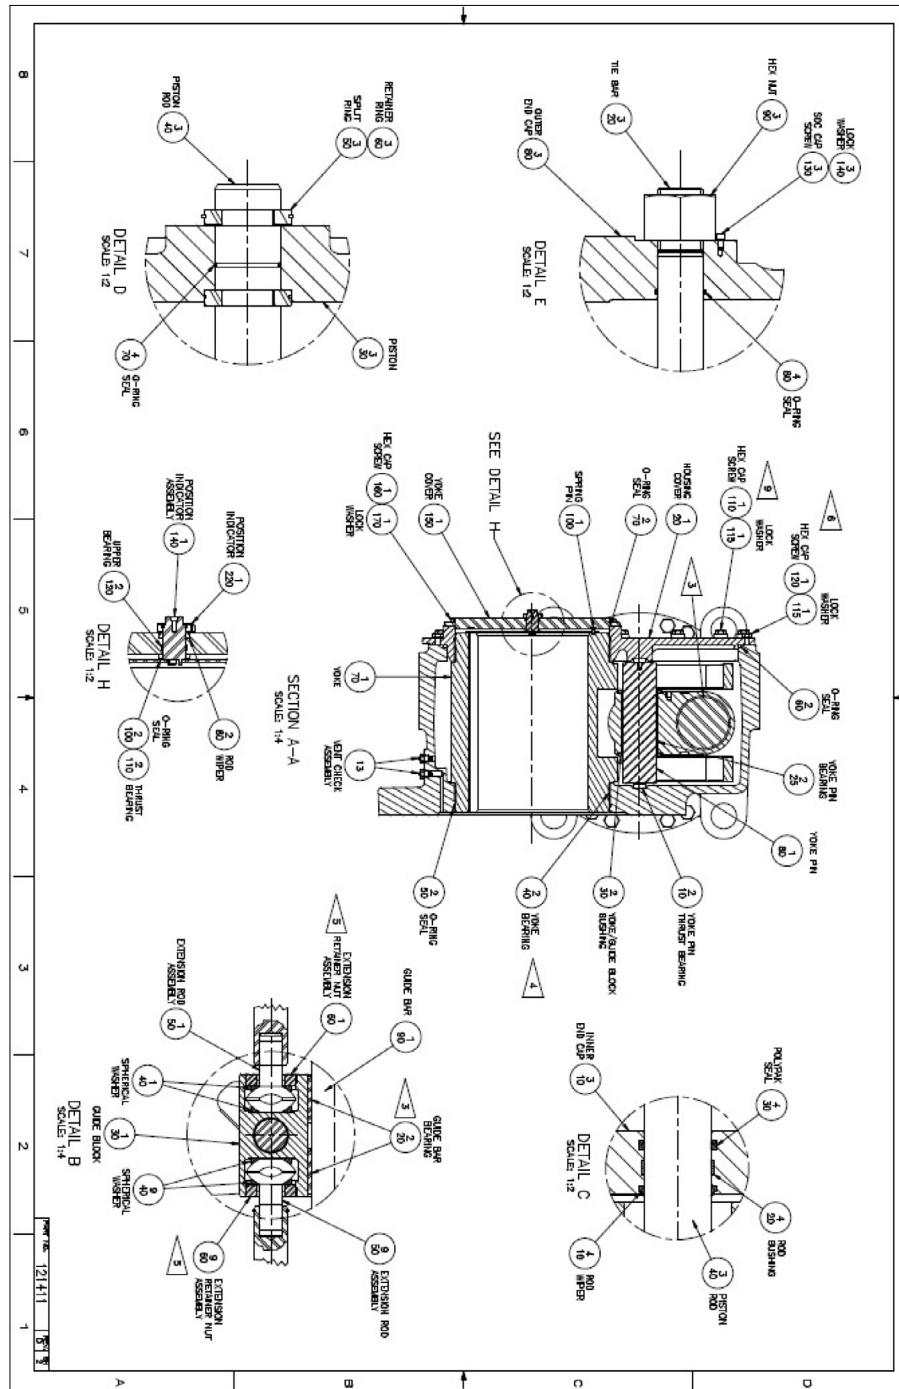

A.5 Part No. VA-ED-005-1120, M18 Assembly Drawing, Sheet 1 of 7

Figure A-5

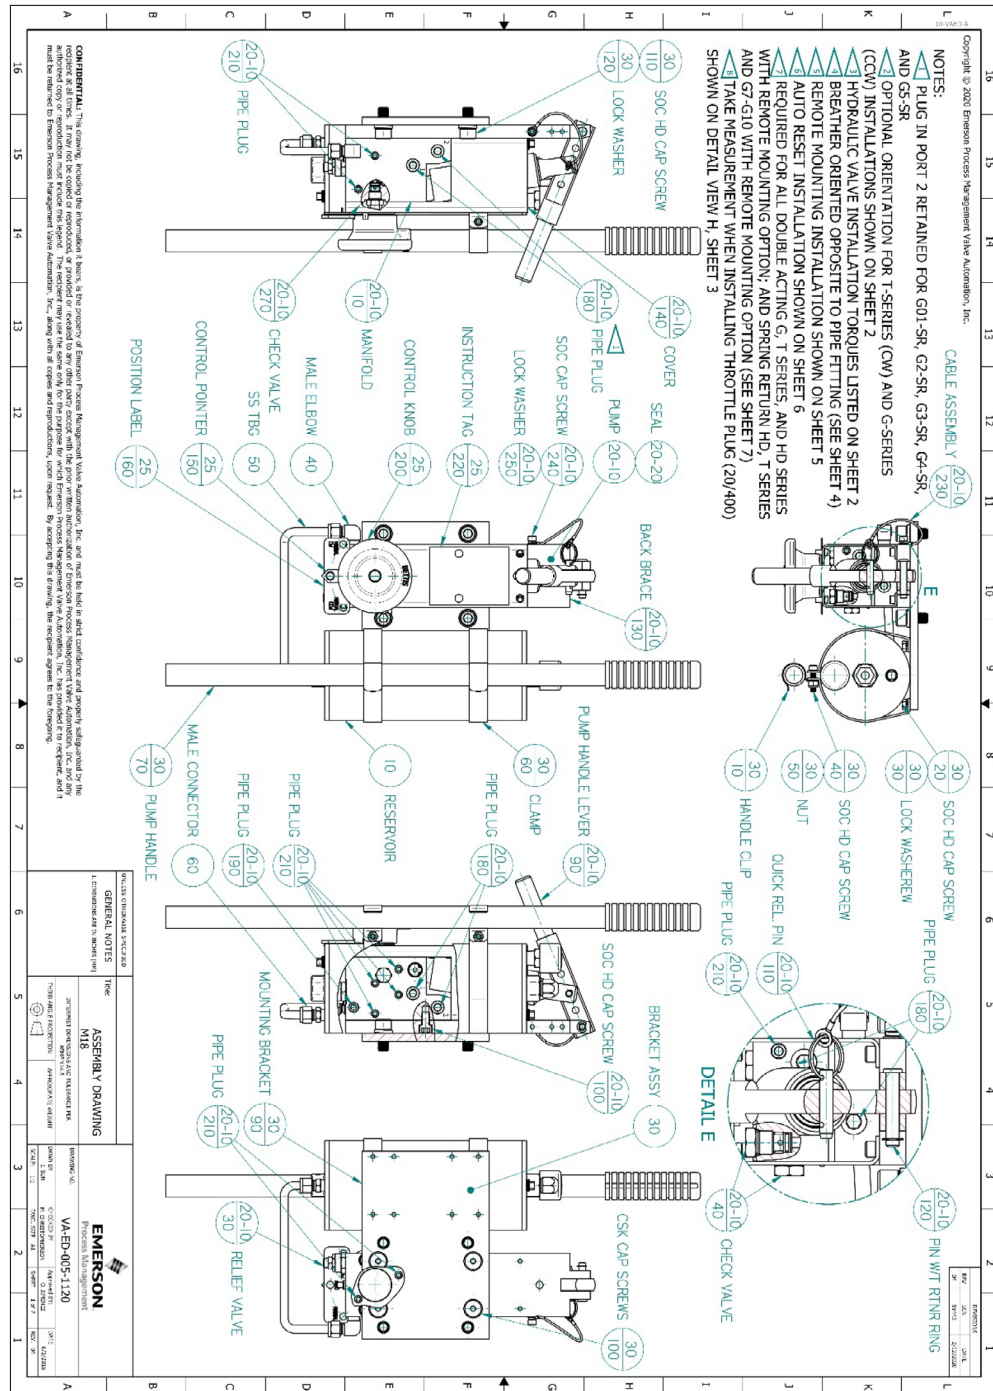


Figure A-6

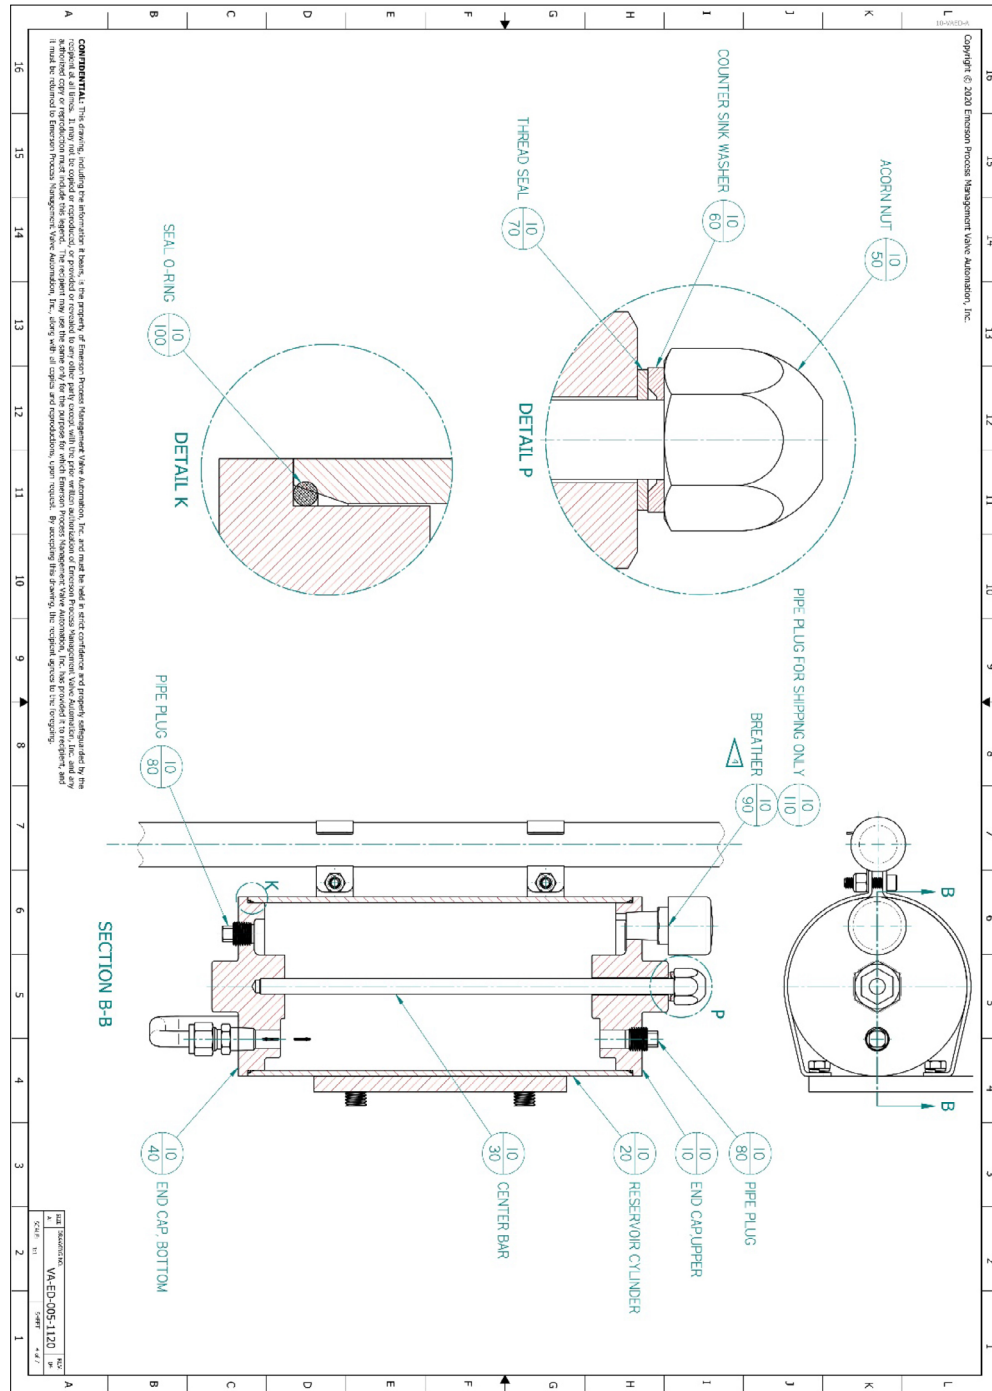


Figure A-7




A.8 Part No. VA-ED-005-1120, M18 Assembly Drawing, Sheet 4 of 7

Figure A-8




A.9 Part No. VA-ED-005-1120, M18 Assembly Drawing, Sheet 5 of 7

Figure A-9

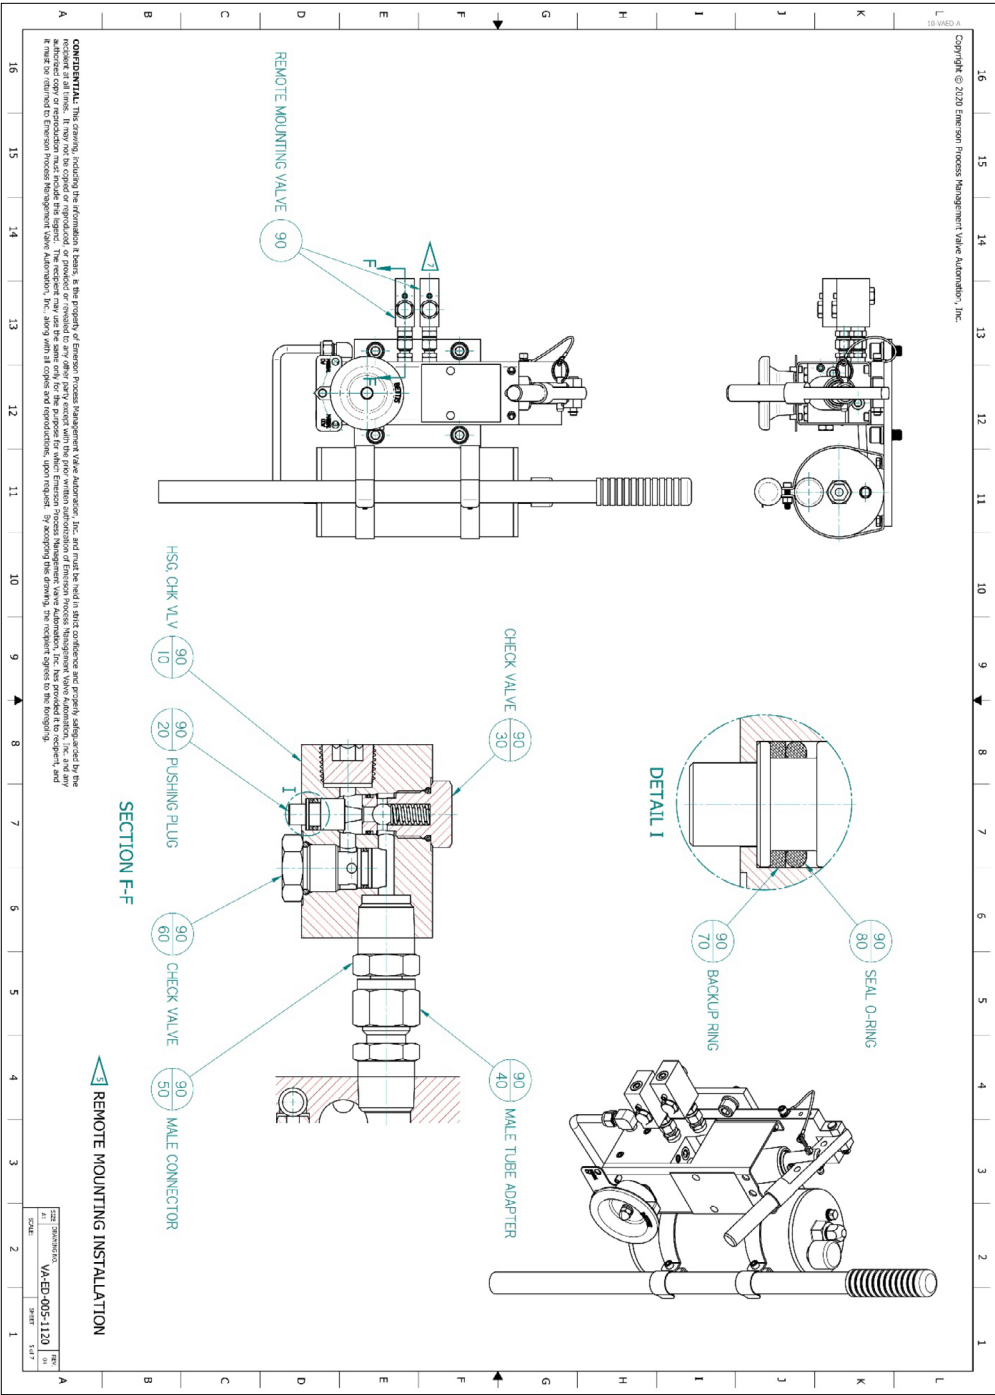


A.10 Part No. VA-ED-005-1120, M18 Assembly Drawing, Sheet 6 of 7

Figure A-10

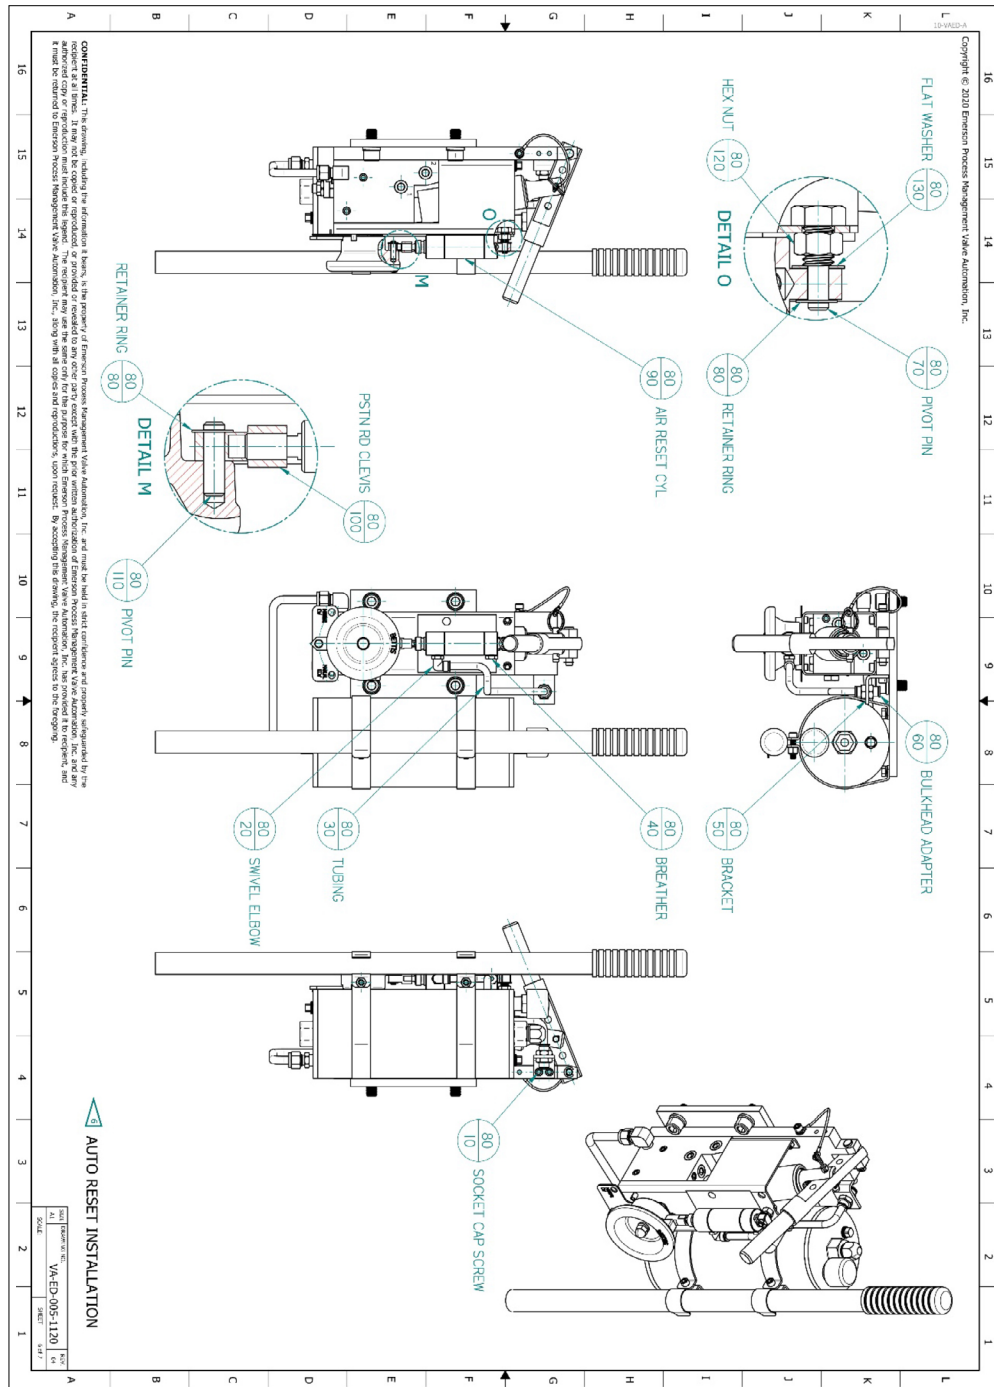

A.11 Part No. VA-ED-005-1120, M18 Assembly Drawing, Sheet 7 of 7

Figure A-11

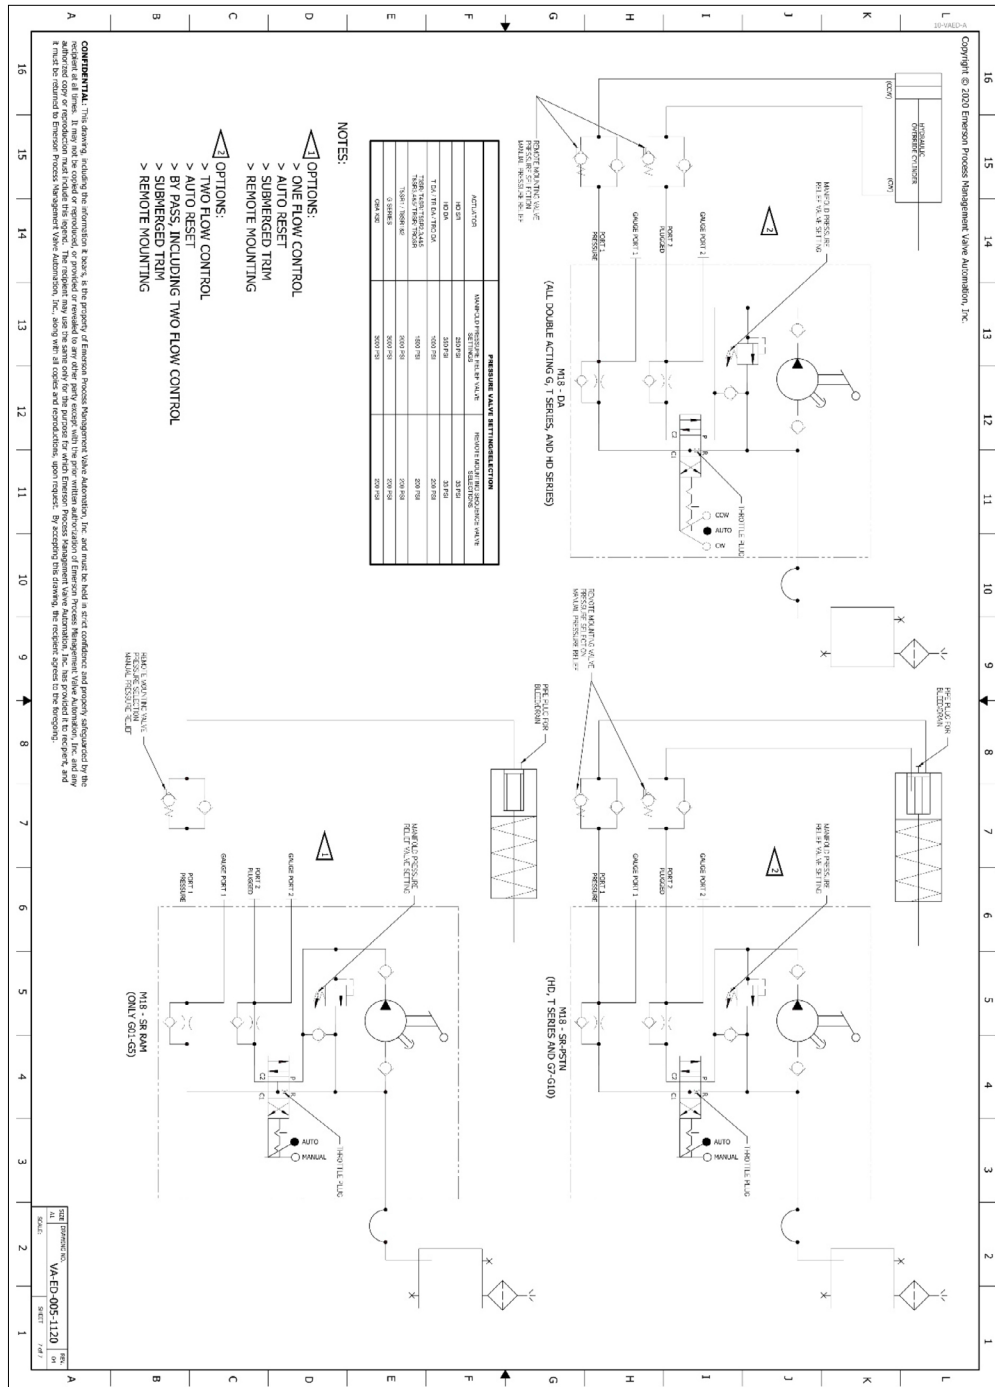

World Area Configuration Centers (WACC) offer sales support, service, inventory and commissioning to our global customers. Choose the WACC or sales office nearest you:

NORTH & SOUTH AMERICA

19200 Northwest Freeway
Houston TX 77065
USA
T +1 281 477 4100

Av. Hollingsworth
325 Iporanga Sorocaba
SP 18087-105
Brazil
T +55 15 3413 8888

ASIA PACIFIC

No. 9 Gul Road
#01-02 Singapore 629361
T +65 6777 8211

No. 1 Lai Yuan Road
Wuqing Development Area
Tianjin 301700
P. R. China
T +86 22 8212 3300

MIDDLE EAST & AFRICA

P. O. Box 17033
Jebel Ali Free Zone
Dubai
T +971 4 811 8100

P. O. Box 10305
Jubail 31961
Saudi Arabia
T +966 3 340 8650

24 Angus Crescent
Longmeadow Business Estate East
P.O. Box 6908 Greenstone
1616 Modderfontein Extension 5
South Africa
T +27 11 451 3700

EUROPE

Holland Fásor 6
Székesfehérvár 8000
Hungary
T +36 22 53 09 50

Strada Biffi 165
29017 Fiorenzuola d'Arda (PC)
Italy
T +39 0523 944 411

For complete list of sales and manufacturing sites, please visit www.emerson.com/actuationtechnologieslocations or contact us at info.actuationtechnologies@emerson.com

www.emerson.com/bettis

VCIOM-15381-EN ©2020 Emerson. All rights reserved.

The Emerson logo is a trademark and service mark of Emerson Electric Co. Bettis™ is a mark of one of the Emerson family of companies. All other marks are property of their respective owners.

The contents of this publication are presented for information purposes only, and while effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the designs or specifications of our products at any time without notice.

BETTIS™

