


# FB2100/FB2200 Flow Computer Coin Cell Battery Field Replacement Guide

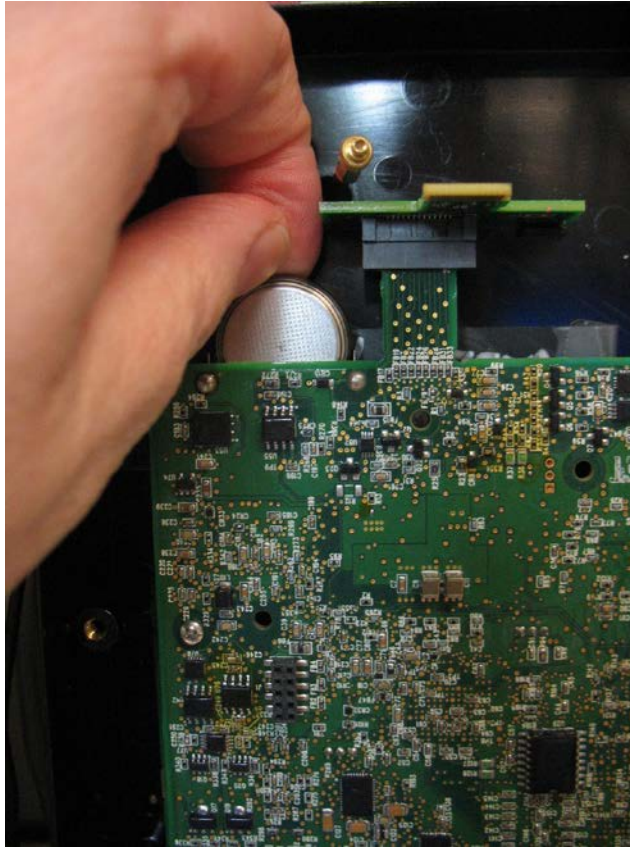

For Part Numbers (Kits):

- 395620-03-1: Coin Cell Battery

## Device Safety Considerations

### ▪ Reading these Instructions

Before operating the device, read these instructions carefully and understand their safety implications. In some situations, improperly using this device may result in damage or injury. Keep this manual in a convenient location for future reference. Note that these instructions may not cover all details or variations in equipment or cover every possible situation regarding installation, operation, or maintenance. Should problems arise that are not covered sufficiently in the text, immediately contact Customer Support for further information.

### ▪ Protecting Operating Processes

A failure of this device – for whatever reason -- may leave an operating process without appropriate protection and could result in possible damage to property or injury to persons. To protect against this, you should review the need for additional backup equipment or provide alternate means of protection (such as alarm devices, output limiting, fail-safe valves, relief valves, emergency shutoffs, emergency switches, etc.). Contact Remote Automation Solutions for additional information.

### ▪ Returning Equipment

If you need to return any equipment to Remote Automation Solutions, it is your responsibility to ensure that the equipment has been cleaned to safe levels, as defined and/or determined by applicable federal, state and/or local law regulations or codes. You also agree to indemnify Remote Automation Solutions and hold Remote Automation Solutions harmless from any liability or damage which Remote Automation Solutions may incur or suffer due to your failure to ensure device cleanliness.

### ▪ Grounding Equipment

Ground metal enclosures and exposed metal parts of electrical instruments in accordance with OSHA rules and regulations as specified in *Design Safety Standards for Electrical Systems*, 29 CFR, Part 1910, Subpart S, dated: April 16, 1981 (OSHA rulings are in agreement with the National Electrical Code). You must also ground mechanical or pneumatic instruments that include electrically operated devices such as lights, switches, relays, alarms, or chart drives.

**Important:** Complying with the codes and regulations of authorities having jurisdiction is essential to ensuring personnel safety. The guidelines and recommendations in this manual are intended to meet or exceed applicable codes and regulations. If differences occur between this manual and the codes and regulations of authorities having jurisdiction, those codes and regulations must take precedence.

### ▪ Protecting from Electrostatic Discharge (ESD)

This device contains sensitive electronic components which be damaged by exposure to an ESD voltage. Depending on the magnitude and duration of the ESD, it can result in erratic operation or complete failure of the equipment. Ensure that you correctly care for and handle ESD-sensitive components.

## System Training

A well-trained workforce is critical to the success of your operation. Knowing how to correctly install, configure, program, calibrate, and trouble-shoot your Emerson equipment provides your engineers and technicians with the skills and confidence to optimize your investment. Remote Automation Solutions offers a variety of ways for your personnel to acquire essential system expertise. Our full-time professional instructors can conduct classroom training at several of our corporate offices, at your site, or even at your regional Emerson office. You can also receive the same quality training via our live, interactive Emerson Virtual Classroom and save on travel costs. For our complete schedule and further information, contact the Remote Automation Solutions Training Department at 800-338-8158 or email us at [education@emerson.com](mailto:education@emerson.com).

## Ethernet Connectivity

This automation device is intended to be used in an Ethernet network which **does not** have public access. The inclusion of this device in a publicly accessible Ethernet-based network is **not recommended**.

# Removing/Replacing Batteries

The coin cell SRAM backup battery preserves data in SRAM memory in the event of a power loss and provides backup power to the real-time clock.

Refer to the table below for the correct field replacement kit part number.

Item	Field Replacement Kit Part Number
Coin cell lithium battery for SRAM backup	395620-03-1
UL Kit File Number: E192567	

## Ambient Temperature Range

May be used up to a *maximum* ambient temperature of 80°C and a *minimum* ambient temperature of -40°C; refer to the data plate attached to the device.

## Required Tools

- #2 Phillips-head screwdriver
- Hexagonal torque wrenches with 3mm and #1 Phillips-head bits. Ranges must include 4 to 6 in-lbs (0.5 to 0.7 N-m).

## Electrical Ratings

- **Input Voltage:** 10.5 Vdc to 30 Vdc external supply (Max power at 10 watts)

## Restriction

Hazardous area approvals require that any part replaced in the field be the exact same part (like for like). Upgrading or substituting different parts violates hazardous area certification.



## Important

Use **only** accessories (batteries) supplied with the flow computer or sold by Emerson as spare parts for this flow computer. Substituting a part you obtain elsewhere (such as a battery) **voids your approval certification**.

## DANGER

EXPLOSION HAZARD: Ensure the area in which you perform this operation is non-hazardous. Performing this operation in a hazardous area could result in an explosion.

## DANGER

EXPLOSION HAZARD: Never open the enclosure in hazardous location. Opening the enclosure in a hazardous location could result in an explosion.

## WARNING

EXPLOSION HAZARD – Substitution of any components may impair suitability for Class 1, Division 2.

### WARNING

EXPLOSION HAZARD - Do not disconnect equipment unless power has been removed or the area is known to be non-hazardous.

---

### WARNING

EXPLOSION HAZARD – Do not replace batteries unless power has been switched off or the area is known to be non-hazardous. Change batteries **only** in an area known to be non-hazardous.

---

#### Note

Use these cell batteries only in devices where the servicing of the cell circuit and replacement of the lithium cells is done by a trained technician.

---



#### Important

If this equipment is used in a manner not specified by the manufacturer, the protection provided by equipment may be impaired.

---

## Removing/Replacing the SRAM Backup Battery

UL Listed Coin Cell Battery Field Installed Accessory Kit for Use in Class I, Division 2, Groups A, B, C, and D

- Flow Computer Coin Cell Battery Field Installed Accessory Kit Part No. 395620-03-1 for Use with UL Listed Class I, Division 2, Groups A, B, C, & D Model Series FB2100 and FB2200

A lithium coin cell battery provides backup power for the SRAM and the real-time clock. The SRAM backup battery can last for up to 10,000 hours of cumulative operation, and only runs if the main power system fails. You do not need to power down the unit to replace the SRAM backup battery.

---



#### Important

Replacement SRAM backup batteries **must be** either the Rayovac® Model BR2335 **or** the Panasonic® Model BR2330.

---


### WARNING

EXPLOSION HAZARD - Batteries must only be changed in an area known to be non-hazardous. See notices at the front of this document.

---

1. Open the enclosure.
2. Loosen the two captive fastening screws on the cover of the black CPU enclosure (which has the HMI module attached to it) and place the cover aside.

## Loosen the Captive Fastening Screws

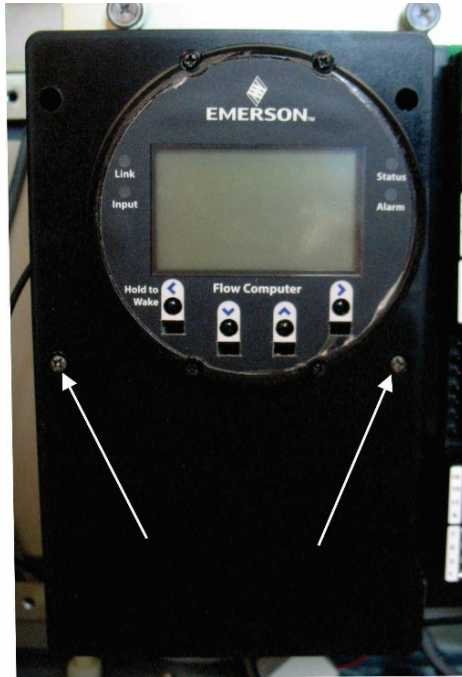


## Removing the CPU Enclosure Cover



3. Grasp the coin cell battery and, with your fingernail in the groove of the top of the battery, slide it out of its slot.

### Coin Cell Battery Removal/Replacement

---

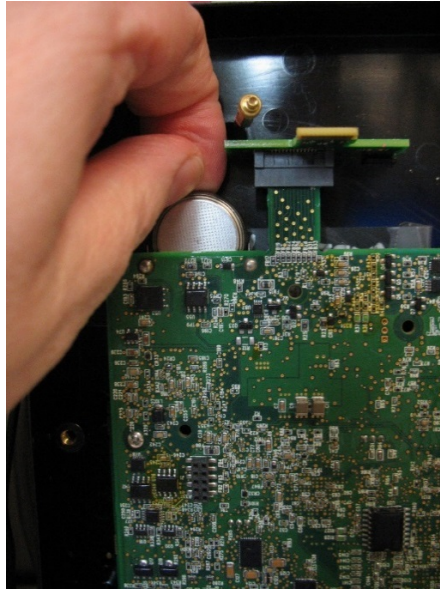

4. Insert the new coin cell battery in the slot. The negative side (shiny with no writing on it) must be facing outwards (towards where the CPU enclosure cover would be).
5. Reattach the cover of the CPU enclosure. Tighten the captive fastening screws with a torque value of 4 to 6 in-lbs (0.5 to 0.7 N-m).
6. Close the flow computer enclosure.



# FB2100/FB2200 Flow Computer Coin Cell Battery Field Replacement Guide

D301855X012

November 2020

---

For customer service and technical support,  
visit [www.Emerson.com/SupportNet](http://www.Emerson.com/SupportNet)

**Global Headquarters,  
North America, and Latin America:**

Emerson Automation Solutions  
Remote Automation Solutions  
6005 Rogerdale Road  
Houston, TX 77072 U.S.A.  
T +1 281 879 2699 | F +1 281 988 4445  
[www.Emerson.com/RemoteAutomation](http://www.Emerson.com/RemoteAutomation)

**Europe:**

Emerson Automation Solutions  
Remote Automation Solutions  
Unit 1, Waterfront Business Park  
Dudley Road, Brierley Hill  
Dudley DY5 1LX UK  
T +44 1384 487200 | F +44 1384 487258

**Middle East/Africa:**

Emerson Automation Solutions  
Remote Automation Solutions  
Emerson FZE  
P.O. Box 17033  
Jebel Ali Free Zone – South 2  
Dubai U.A.E.  
T +971 4 8118100 | F +971 4 8865465

**Asia-Pacific:**

Emerson Automation Solutions  
Remote Automation Solutions  
1 Pandan Crescent  
Singapore 128461  
T +65 6777 8211 | F +65 6777 0947

© 2018-2020 Remote Automation Solutions, a business unit of Emerson Automation Solutions. All rights reserved.

This publication is for informational purposes only. While every effort has been made to ensure accuracy, this publication shall not be read to include any warranty or guarantee, express or implied, including as regards the products or services described or their use or applicability. Remote Automation Solutions (RAS) reserves the right to modify or improve the designs or specifications of its products at any time without notice. All sales are governed by RAS terms and conditions which are available upon request. RAS accepts no responsibility for proper selection, use or maintenance of any product, which remains solely with the purchaser and/or end-user.